



# BEANIE HAT 4 SMD LED USB R/CHARGE WITH WIRELESS HEADPHONES

MODEL NO: **LED185W**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

## 1. SAFETY

- ✓ Inspect the cable and connector for wear and damage to ensure items are safe before connecting to the power supply. If worn or damaged **DO NOT** use.
- ✓ Ensure the lamp is fully charged before initial use.
- ✗ **DO NOT** charge in damp conditions.
- ✗ **DO NOT** turn the lamp on when it is being charged.
- ✗ **DO NOT** shine directly into your, another person's or an animal's eyes.
- ✗ **DO NOT** allow children to use the lamp.
- ✗ **DO NOT** handle or move the lamp whilst it is being charged.
- ✗ **DO NOT** use the lamp if you suspect that the battery or the lamp casing is damaged.
- ✗ **DO NOT** leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.
- ✗ **DO NOT** attempt to open, disassemble, modify or service the battery pack.
- ✗ **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
- ✗ **DO NOT** expose to temperatures above 60°C (140°F).
- ✓ Replace only with the battery pack designated for this product.
- ✓ Recycle or dispose of used battery as stipulated by local regulations.
- ✓ If the electrolyte in the cells gets on your skin, thoroughly wash with water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

## 2. INTRODUCTION



Warm and comfortable beanie hat with a removable SMD spotlight. Features three light settings - full light (100%) medium light (75%) and low light (50%). Includes wireless headphones for phone calls and music 2.4GHz transfer speed up to 10m. Removable lamp & speaker chargeable via a USB port. Positioning of the LED gives a sufficient beam of light ahead of the user. LED and wireless speakers powered by a rechargeable 3.7V 300mAh Lithium-Polymer battery. Supplied with USB charging cable.

## 3. SPECIFICATION

Model No:.....**LED185W**  
 Battery: .....3.7V 300mAh Polymer  
 Charging Time:.....3hr  
 LED Qty: .....4 SMD  
 Lumen Output: ..... 100%/75%/50%: 120/90/60lm  
 Operating Time: .....100%/75%/50%; 2/4/5hr

## 4. OPERATION

- 4.1. The light is operated by means of the on/off switch (fig.1):
- 4.1.1. The first press of the switch selects full power (120lm).
  - 4.1.2. The second press, 75% (90lm).
  - 4.1.3. The third press, 50% power (60lm).
  - 4.1.4. To switch off, press for the fourth time.

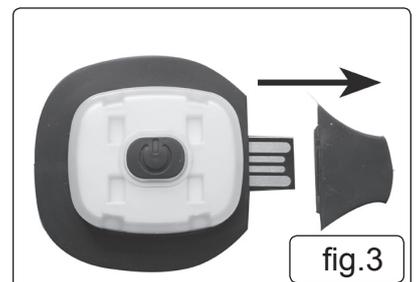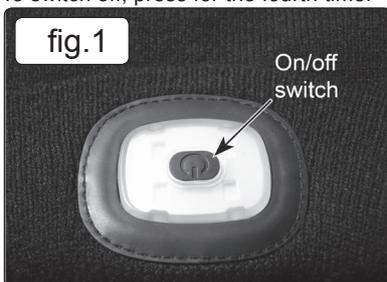

## 4.2. CHARGING THE LIGHT


- 4.2.1. Push the light unit back from the front of the hat to remove (fig.2).
- 4.2.2. Remove the USB cap (fig.3) and insert the plug into a USB socket.
- 4.2.3. When the connection is made, a red light will show through the casing.
- 4.2.4. When the light changes to green, charging is complete. Remove the light unit from the USB socket and return to the hat.

## 4.3. WIRELESS HEADPHONE OPERATION (FIG.5)

- 4.3.1. To turn the headphones on long press play.
- 4.3.2. Scan for the headphones using your phones wireless settings.
- 4.3.3. When the device is playing the indicator light will flash blue.
- 4.3.4. When the device is paused the light will illuminate solid blue.
- 4.3.5. To skip forward press the plus button once.
- 4.3.6. To skip to the start of a track press the minus button once.
- 4.3.7. To skip to the previous track press the minus button twice.
- 4.3.8. To turn the volume up press the pause button and then press the plus button, press play again to check that the volume is at the desired level.
- 4.3.9. To turn the volume down press the pause button and then press the minus button, press play again to check that the volume is at the desired level.

## 4.4. CHARGING THE HEADPHONES

- 4.4.1. To charge the device the headphones units can be removed from the hat (fig.4).

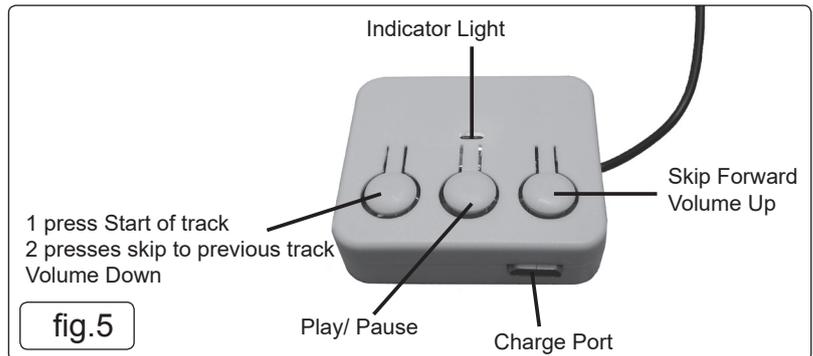

- 4.4.2. Using a mains adaptor or laptop charge the device. The indicator light will shine red while the device is charging (fig.5).

## 5. MAINTENANCE

- 5.1. Remove the light unit, see section 4.2.1., and the speaker units 4.4.1 before washing the hat.
- 5.2. Wash the hat at a low temperature and **DO NOT** tumble dry.
  - \* **DO NOT** use solvent or abrasive cleaners to clean the light unit.



### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



### BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk