

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.




**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.**

### 1. SAFETY INSTRUCTIONS

- ✓ Maintain the workbench in good condition. Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the workbench clean for best and safest performance and check moving parts alignment regularly.
- ✓ Locate the workbench in a suitable working area. Keep area clean and tidy and ensure there is adequate lighting.
- ✓ Ensure the workpiece is correctly held or secured before commencing work.
- ✓ Ensure that any workpiece which extends beyond the bench is adequately supported.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✗ DO NOT use the workbench for any purpose other than that for which it is designed.
- ✗ DO NOT get the workbench wet or use in wet weather conditions, and DO NOT expose the workbench to excessive heat.
- ✗ DO NOT operate the workbench if any parts are missing as this may cause failure and/or personal injury.
- ✗ DO NOT stand on the top of workbench, or use it as standing platform or to support a platform. The workbench is for clamping items only.
- ✓ When not in use store in a safe, dry, child proof area and ensure it will not topple over.




### 2. ASSEMBLY

Unpack the product and check contents to ensure no parts are damaged. Should there be any damaged or missing parts contact your supplier immediately. Follow the step by step illustrations to assembly your bench.

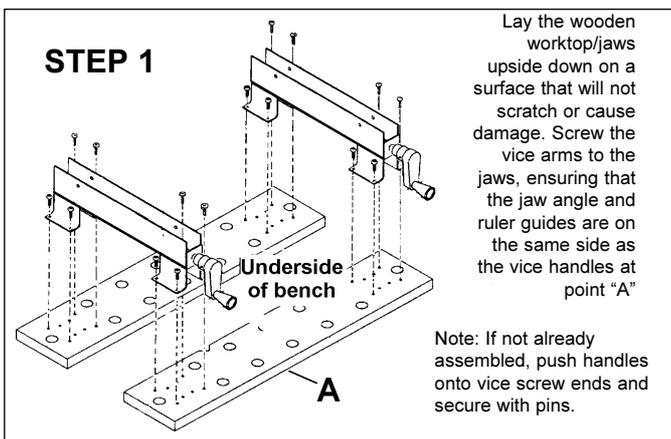

#### STEP 2

Open the legs and align with holes on the inside of the vice cross arms at points "B" ensuring the curvatures on the lower part of the legs "Y" point outward. Insert bolts from the outside of the cross arm with washers and secure with washers and nuts from the inside.

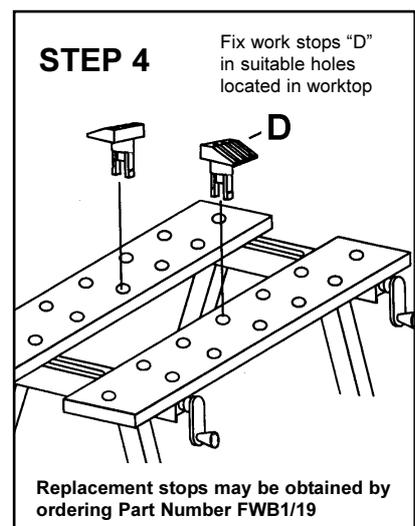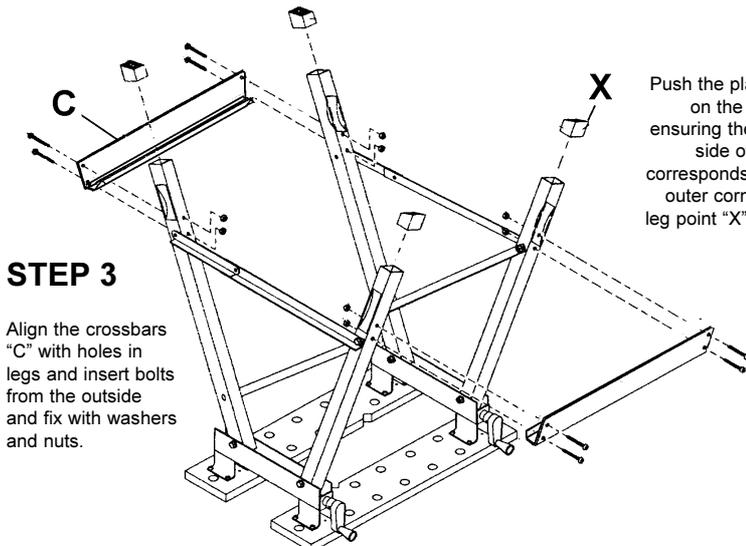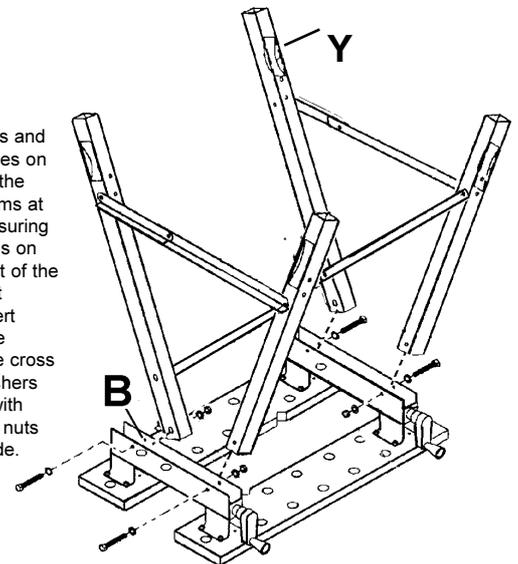

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this equipment. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.