



Item	Part No.	Description
1	INVMIG200V201	Handle
2	INVMIG200V202	Cover
3	INVMIG200V203	Power Cord
4	INVMIG200V204	Connecting Screw Rod
5	INVMIG200V205	Gas Valve
6	INVMIG200V206	Switch, Rocker
7	INVMIG200V207	Back Panel
8	INVMIG200V208	Fan
9	INVMIG200V209	Main PCB Board
10	INVMIG200V210	Control PCB Board
11	INVMIG200V211	Middle Panel
12	INVMIG200V212	Wire Feed Motor
13	INVMIG200V213	Bottom Panel
14	INVMIG200V214	Mig Connector
15	INVMIG200V215	Panel, Front
16	INVMIG200V216	Weld Power cableC

Item	Part No.	Description
17	INVMIG200V217	Weld Power Connector
18	INVMIG200V218	Earth Cable (c/w Clamp)
19	INVMIG200V219	Mig Torch
20	INVMIG200V220	Contact Tip
21	MIG955	Nozzle (Pack of 3)
22	INVMIG200V222	Switch, Spot Weld Rocker
23	INVMIG200V223	Potentiometer Knob
24	INVMIG200V224	Support Plate, Front Panel
25	INVMIG200V225	Control PCB, Front Panel
26	INVMIG200V226	Panel, Left Door
27	INVMIG200V227	Spool Holder Assembly
28	INVMIG200V228	Latch
--	S0771.35	Hand-Held Mask (Not Shown)
--	S0771.35H	Handle For Mask (Not Shown)
--	TIG180S.34	Gas Hose & Fitting (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.