



Item	Part No.	Description
2	TIG160.02	Cable Clamp
3	TIG160.03	Main Switch
4	TIG160.04	Back Panel
5	TIG160.05	Handle
6	MSP516.S	Machine Screw Pan Head Phillips M5x16mm (single)
7	TIG130.07	Top Case (for TIG130 only)
--	TIG160.07	Top Case (for TIG160 only)
8	TIG130.08	Crossbeam (for TIG130 only)
--	TIG160.08	Crossbeam (for TIG160 only)
9	TIG130.09	PCB (for TIG130 only)
--	TIG160.09	PCB (for TIG160 only)
10	MSC410.S	Csk Phillips Machine Screw M4x10 (single)
11	TIG160.11	PCB Support
12	TIG160.12	Fan
13	TIG160.13	Plastic Foot
14	TIG160.14	Screw for Foot
15	TIG130.15	Front Panel (for TIG130 only)
--	TIG160.15	Front Panel (for TIG160 only)
16	TIG160.16	Potentiometer
17	TIG160.17	Power Indicator Lamp
18	TIG160.18	Overload Indicator Lamp
19	TIG160.19	Current Adjustment Knob

Item	Part No.	Description
20	TIG160.20	Dinse Connector
21	SN18.S	Steel Nut M18 Zinc Din934 (single)
22	TIG130.22	Bottom Panel (for TIG130 only)
--	TIG160.22	Bottom Panel (for TIG160 only)
23	TIG130.23	EMI Filter (for TIG130 only)
--	TIG160.23	EMI Filter (for TIG160 only)
24	TIG160.24	Tig Torch Connector
25	SN12.S	Steel Nut M12 Zinc Din934 (single)
26	TIG160.26	Connection Socket
27	SN10.S	Steel Nut M10 Zinc Din934 (single)
28	TIG160.28	Tube Connector
29	TIG160.29	Tube Connector
30	TIG160.30	Hose Adaptor
31	TIG160.31	Valve Support
32	TIG160.32	Gas Valve
33	TIG160.33	MMA/TIG Conversion Switch
34	TIG130.34	Welding Cable (for TIG130 only)
--	TIG160.34	Welding Cable (for TIG160 only)
35	TIG130.35	Earth Clamp Cable (for TIG130 only)
--	TIG160.35	Earth Clamp Cable (for TIG160 only)
36	TIG130.36	Tig Torch (for TIG130 only)
--	TIG160.36	Tig Torch (for TIG160 only)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.