

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this seat.
- Locate seat in a suitable working area.
- WARNING!** Use seat on level and solid ground, preferably concrete.
- Keep the seat clean and tidy in accordance with good workshop practice.
- DO NOT** use the seat for any purpose other than that for which it is designed.
- DO NOT** stand on the seat.
- DO NOT** use the seat outdoors.
- DO NOT** get the seat wet or use in damp or wet locations or areas where there is condensation.
- DO NOT** clean the seat with any solvents which may damage the paint surface or the protective coating on the padded seat base.
- DO NOT** use if damaged.

2. INTRODUCTION

Extra thick cushioned padding for added comfort when seated. Suitable for use in Bodyshop and Detailing environments as well as general garage use. Easy-rolling Ø100mm rubber castors with ball-bearing swivel. Cup/bottle holders and storage trays for tools and components.

3. SPECIFICATION

Model No.....**SCR90**
Overall Size (W x D x H)680 x 460 x 410mm

4. CONTENTS


- 1 Seat
- 2 Frame
- 3,4,6,7 Trays
- 5 Nuts
- 8 Wheels

5. ASSEMBLY

- 5.1. Place castors through frame (2) and secure with nut and washer (5).
- 5.2. Fit tray (7) into base of frame (2).
- 5.3. Fit trays (3 & 4).
- 5.4. Slide tray (6) under seat.

6. MAINTENANCE

- 6.1. Before each use, inspect the overall condition of the unit for broken, cracked or bent parts that may affect the proper operation.
- 6.2. Regularly check the tightness of all fixings before use.
- 6.3. Smear the castor bearings with a thin film of silicone grease quarterly.
- 6.4. Ensure the castor wheels are able to rotate and swivel freely. Replace if necessary.
- 6.5. Clean the seat cushion, trays and frames with a moist cloth and mild detergent. **DO NOT** use solvents to clean the unit.

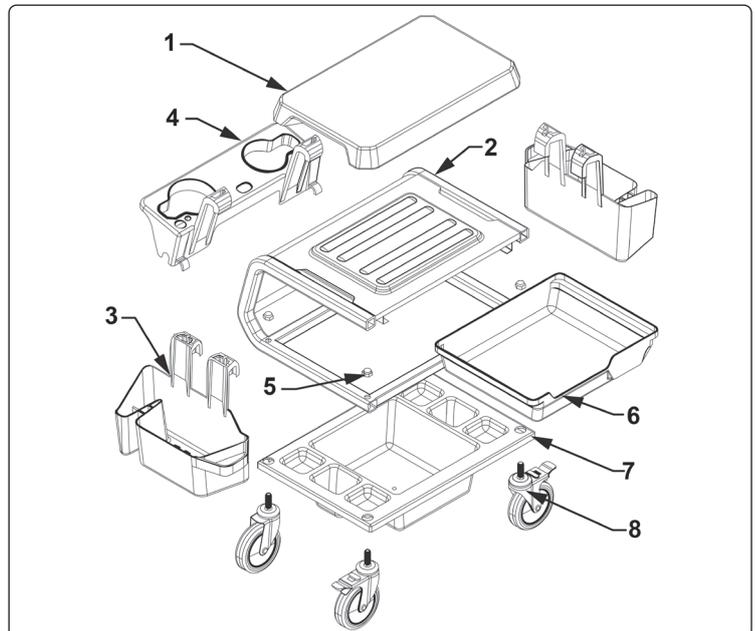

Parts support is available for this product. Please email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk