## **Guide to Assembly & Usage**

# **BiG400 Packing Station**





## **Assembly - BiG400 Packing Station**



### **Assembly - BiG400 Packing Station**













 Place reel bars (1) onto support beams
(and support brackets (1). Add plastic top caps (2). Workstation is now complete.



### Loading information

#### **BiG400 Packing Station**

These load charts relate to shelving layouts with the following specifications:

- Maximum upright height = 1677mm
- Similar distances (height) between levels
- Workstations are positioned on a level floor

For any other uses, please refer to your supplier for detailed loading capacities

#### Shelf load capacities

Maximum permitted shelf capacities are based on UDL<sup>1</sup>. Please note that the workstation capacity may limit the maximum load per shelf:

	BiG400 Packing Station
Shelf Width mm	Load Capacity per shelf
Worktop	400kg
Lower Shelf	200kg
Cantilever Top Shelf	100kg
Reel Bar	50kg
Capacities are common for all stand	rd shelf depths.

#### IF YOU ARE IN ANY DOUBT REGARDING LOAD CAPACITIES, PLEASE CONTACT YOUR SUPPLIER

<sup>†</sup>UDL = Uniformly Distributed Load