

# Guide to Assembly & Usage

## BiG400 Panel Workstation



### Information

If in doubt, contact the supplier



Read this guide thoroughly before commencing assembly and retain for future reference



Before commencing assembly, unpack carefully and check that all components ordered are included



Assembly should be undertaken by a minimum of two competent people



Tools – Rubber Mallet



Assess for floor fixing. Tall narrow bays may require this to ensure stability



### Caution

During assembly, ensure to:



Take care during assembly and in use, particularly when lifting or stretching and when using tools



Wear appropriate safety clothing – protective gloves and footwear are recommended



Build on a suitable level floor, which is strong enough to support the load and allow adequate working space



Dispose of packaging materials responsibly



### Warning

Rules for the safe use of workstations:



Ensure these instructions are retained for reference and that users are aware of the rules for safe use



Never climb on the structure or stand on the workstation



Do not lean or support ladders, steps, or other objects against workstation



Do not use in damp or wet conditions



Load heavy items on the lower shelves and lighter items on the higher shelves



This product is designed for hand loading only














Ensure that the maximum load carrying capacities are not exceeded



Please refer to the loading information supplied for details



### COMPONENT CHECK LIST

Component		Quantity
<b>A</b> Plastic Foot		4
<b>B</b> Plastic Top Cap		4
<b>C</b> 15mm Chipboard Deck		2
<b>D</b> Top Shelf Deck		1
<b>E</b> Centre Support		2
<b>F</b> Cantilever Shelf Beam		1
<b>G</b> Upright 915mm		2
<b>H</b> Upright 1677mm		2
<b>I</b> 'L' Beam (long)		1
<b>J</b> 'C' Beam		4
<b>K</b> 'L' Beam (short)		4

If you have any missing components please take note of the part name and contact your supplier.

### Loading information

For any other layouts, please refer to your supplier for detailed loading capacities.

#### Panel Workstations

##### Shelf load capacities

Maximum permitted shelf capacities are based on UDL<sup>1</sup>.







Please note that the workstation capacity may limit the maximum load per shelf: UDL<sup>1</sup>.

**IF YOU ARE IN ANY DOUBT REGARDING LOAD CAPACITIES, PLEASE CONTACT YOUR SUPPLIER**

<sup>1</sup>UDL = Uniformly Distributed Load


	Panel Workstation
Top Cantilever Shelf	100kg
Worktop	400kg
Lower Shelf	400kg

# Assembly - BiG400 Panel Workstation

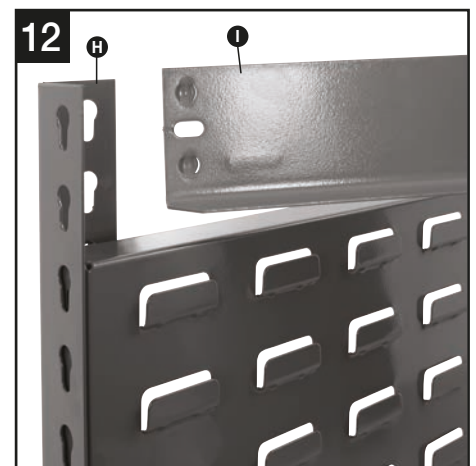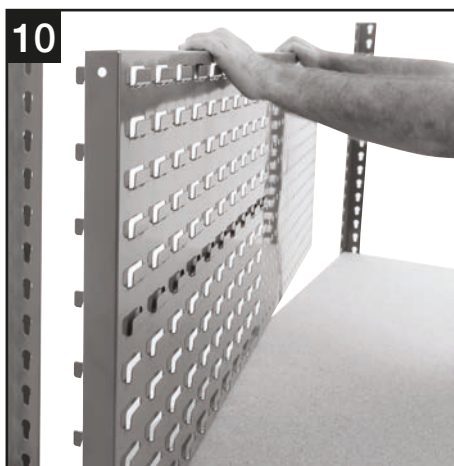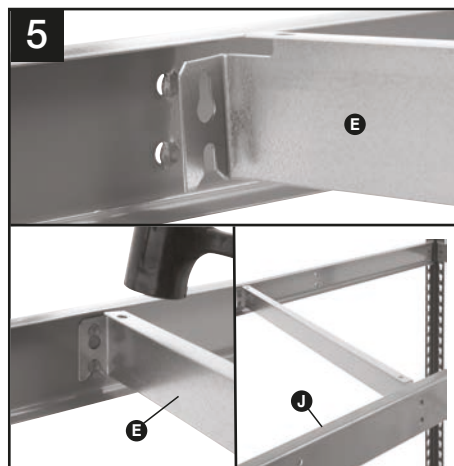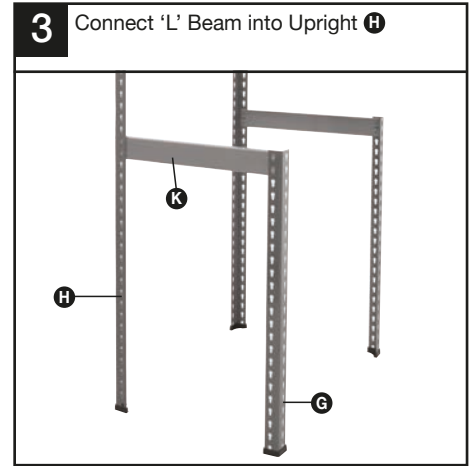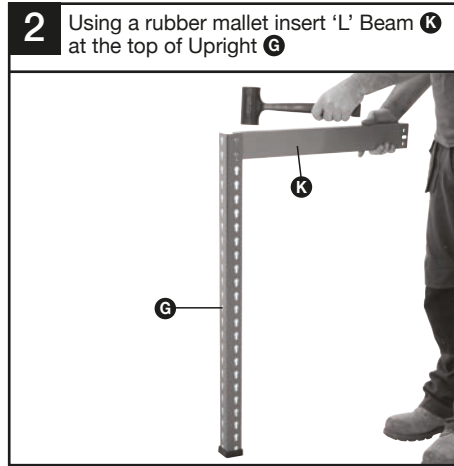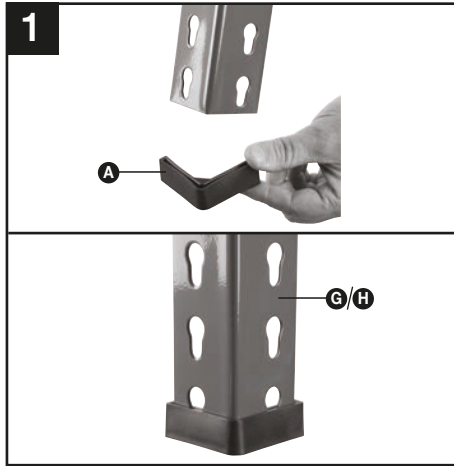


# Assembly - BiG400 Panel Workstation

## 13 Insert Cantilever Shelf Beam **F**

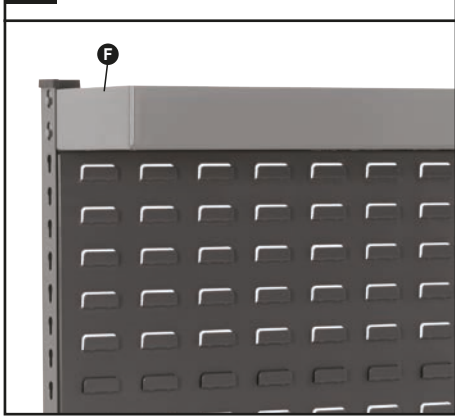

## 14

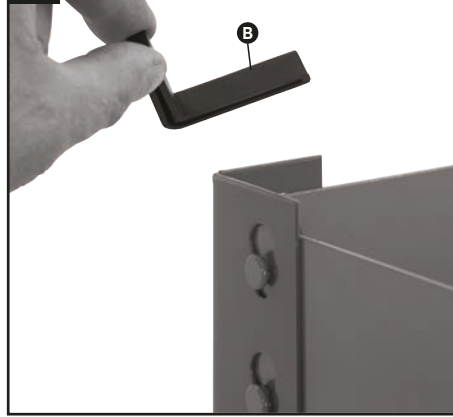

## 15

