


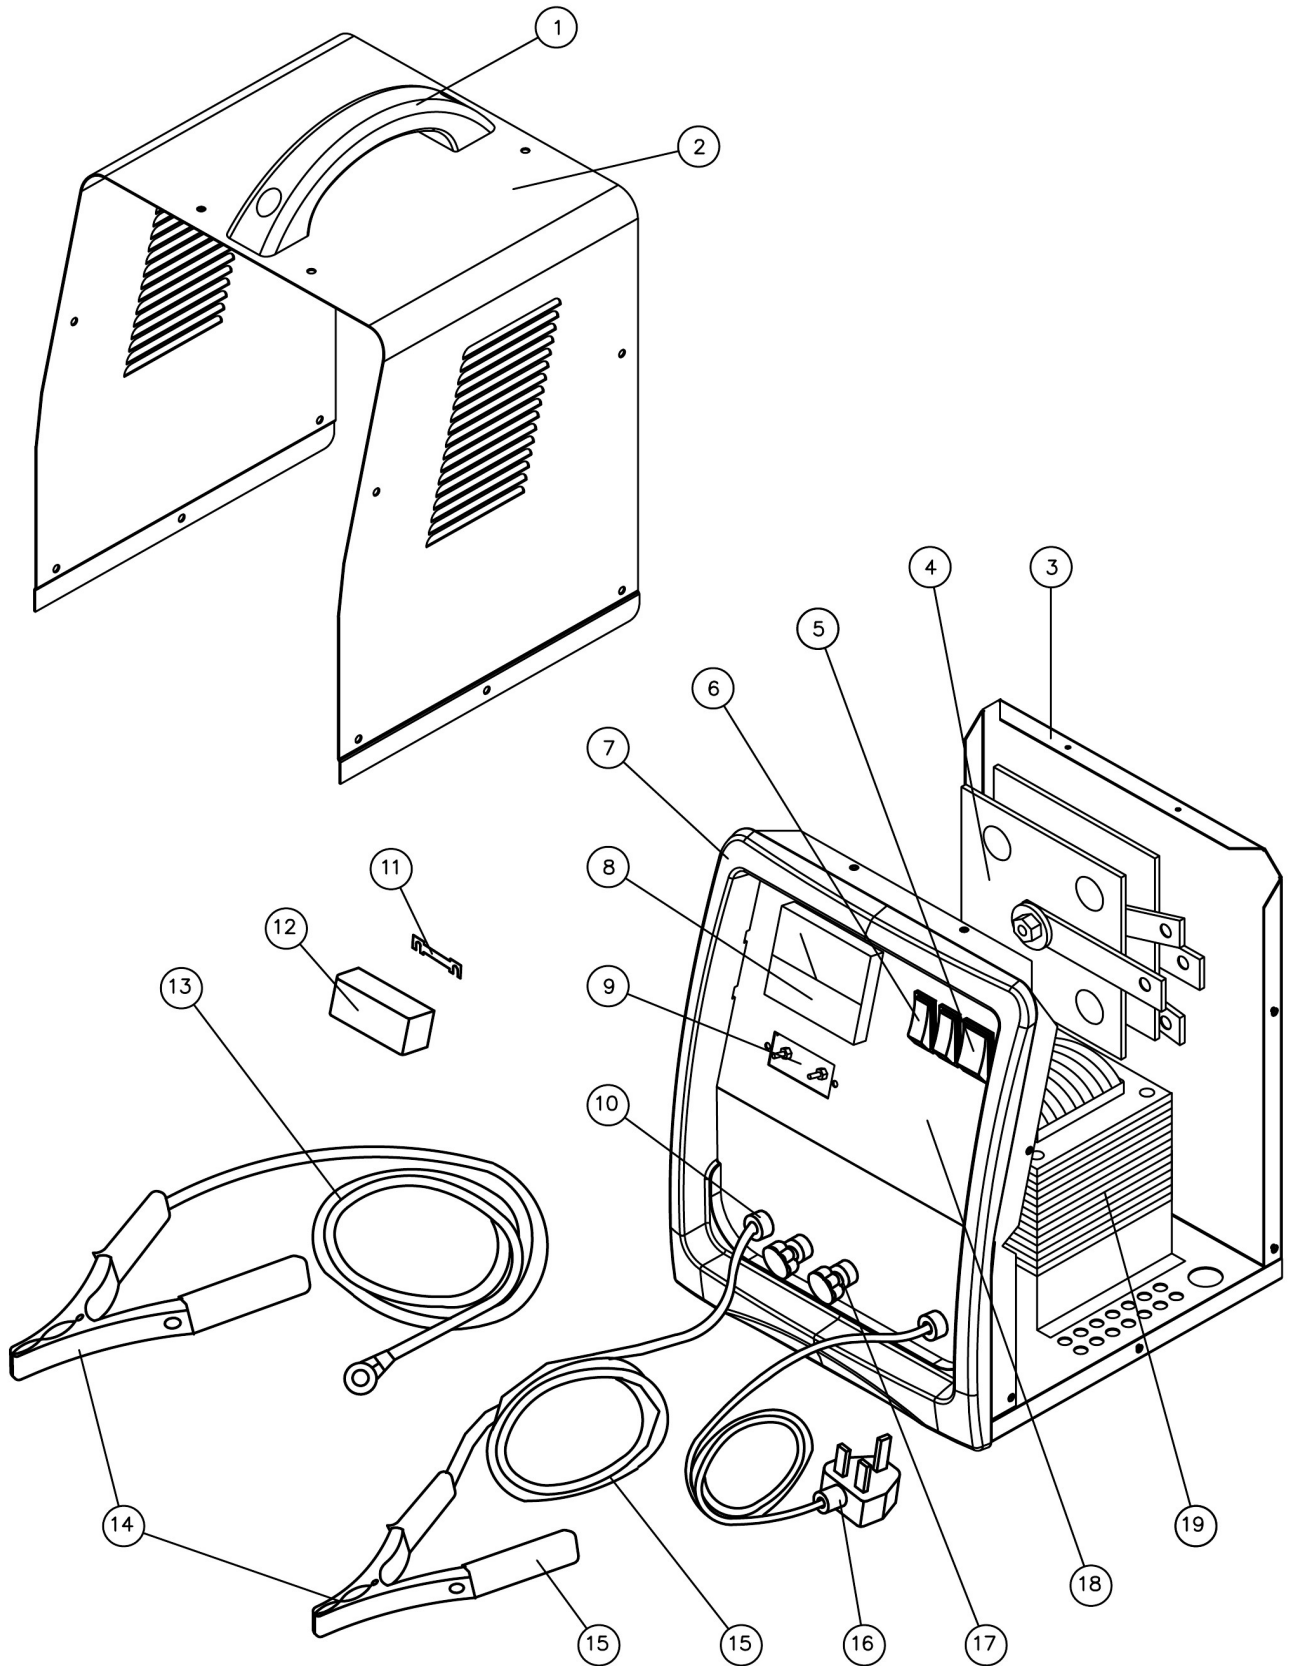

Ref. No.	Description	SIP Part No.	Ref. No.	Description	SIP Part No.
1.	Handle	PW02-00082	11.	Fuse 100a	PW02-00004
2.	Cover	PW02-00085	12.	Cover for fuse holder	PW02-00011
3.	Chassis	PW02-00091	13.	Red cable	PW02-00056
4.	Rectifier	PW02-00033	14.	Red/Black clamps	PW02-00071
5.	On/Off switch	PW02-00022	15.	Black cable	PW02-00064
6.	High/Low switch 16a	PW02-00021	16.	Mains lead	PW02-00111
7.	Front frame (plastic)	PW02-00097	17.	Red terminal assy. complete	PW02-00104
8.	Ammeter 20A/start	PW02-00016	18.	Front panel	PW02-00093
9.	Fuse holder	PW02-00010	19.	Transformer	PW02-00047
10.	Cable gland	PW02-00079			