


05534 - Professional Startmaster PW520 Battery Charger

Exploded Diagram & Parts List

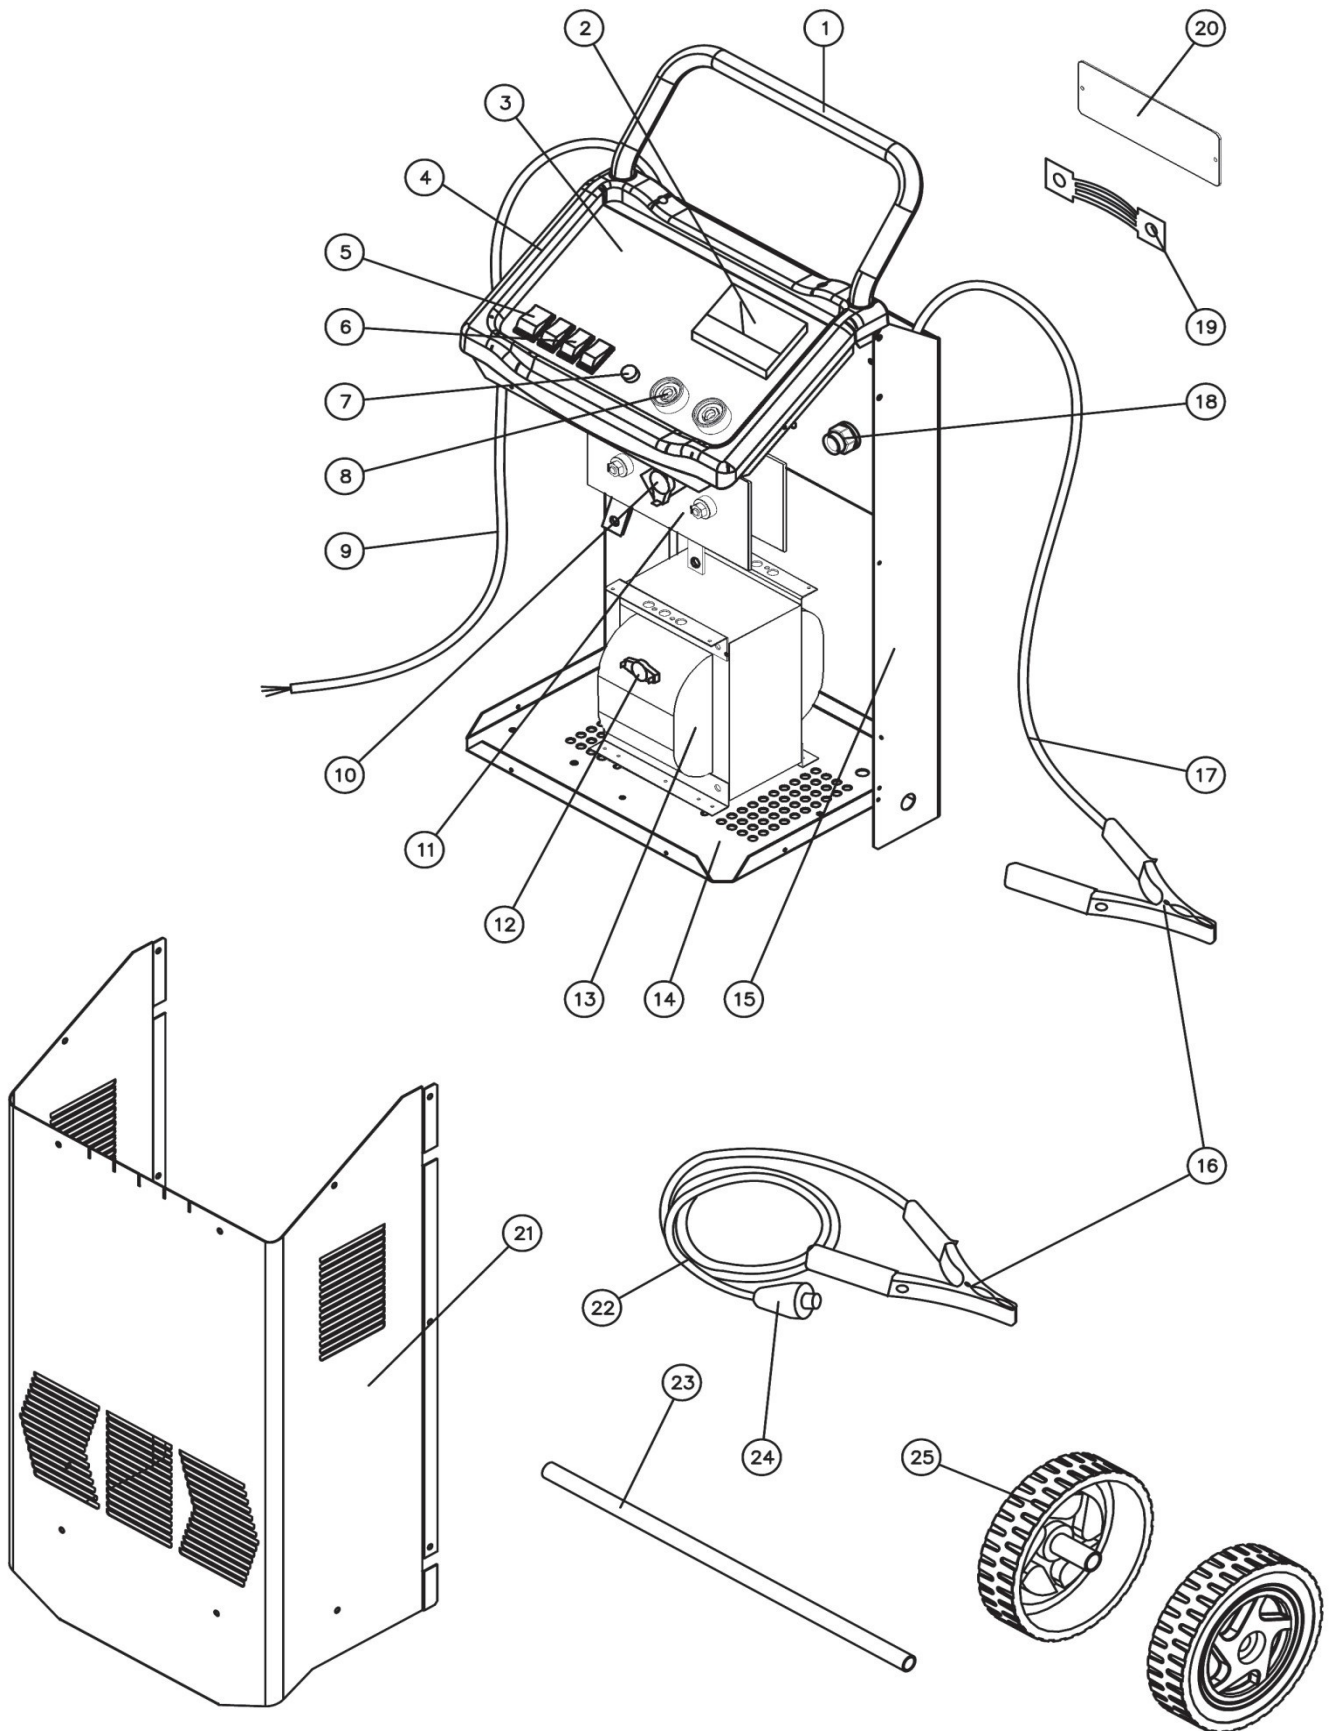

Ref. No.	Description	SIP Part No.	Ref. No.	Description	SIP Part No.
1.	Handle	PW02-00083	14.	Lower panel	PW02-00100
2.	Ammeter 30A/start	PW02-00017	15.	Rear panel	PW02-00102
3.	Front panel	PW02-00096	16.	Red/Black clamps	PW02-00072
4.	Front frame (plastic)	PW02-00098	17.	Black cable	PW02-00065
5.	On/Off switch	PW02-00022	18.	Cable gland	PW02-00081
6.	High/Low switch 16a	PW02-00021	19.	Fuse 120a	PW02-00006
7.	Orange pilot lamp	PW02-00038	20.	Fuse cover	PW02-00012
8.	Dinse socket 25sqmm	PW02-00105	21.	Front cover	PW02-00086
9.	Mains lead	PW02-00112	22.	Red cable	PW02-00057
10.	Thermostat (rectifier)	PW02-00027	23.	Axle D16 L412	PW02-00107
11.	Rectifier PMS8/2/2	PW02-00034	24.	Dinse plug 25sqmm	PW02-00106
12.	Thermostat (transformer)	PW02-00029	25.	Wheel D150	PW02-00109
13.	Transformer	PW02-00048	N/A.	Wheel clip	PW02-00144