


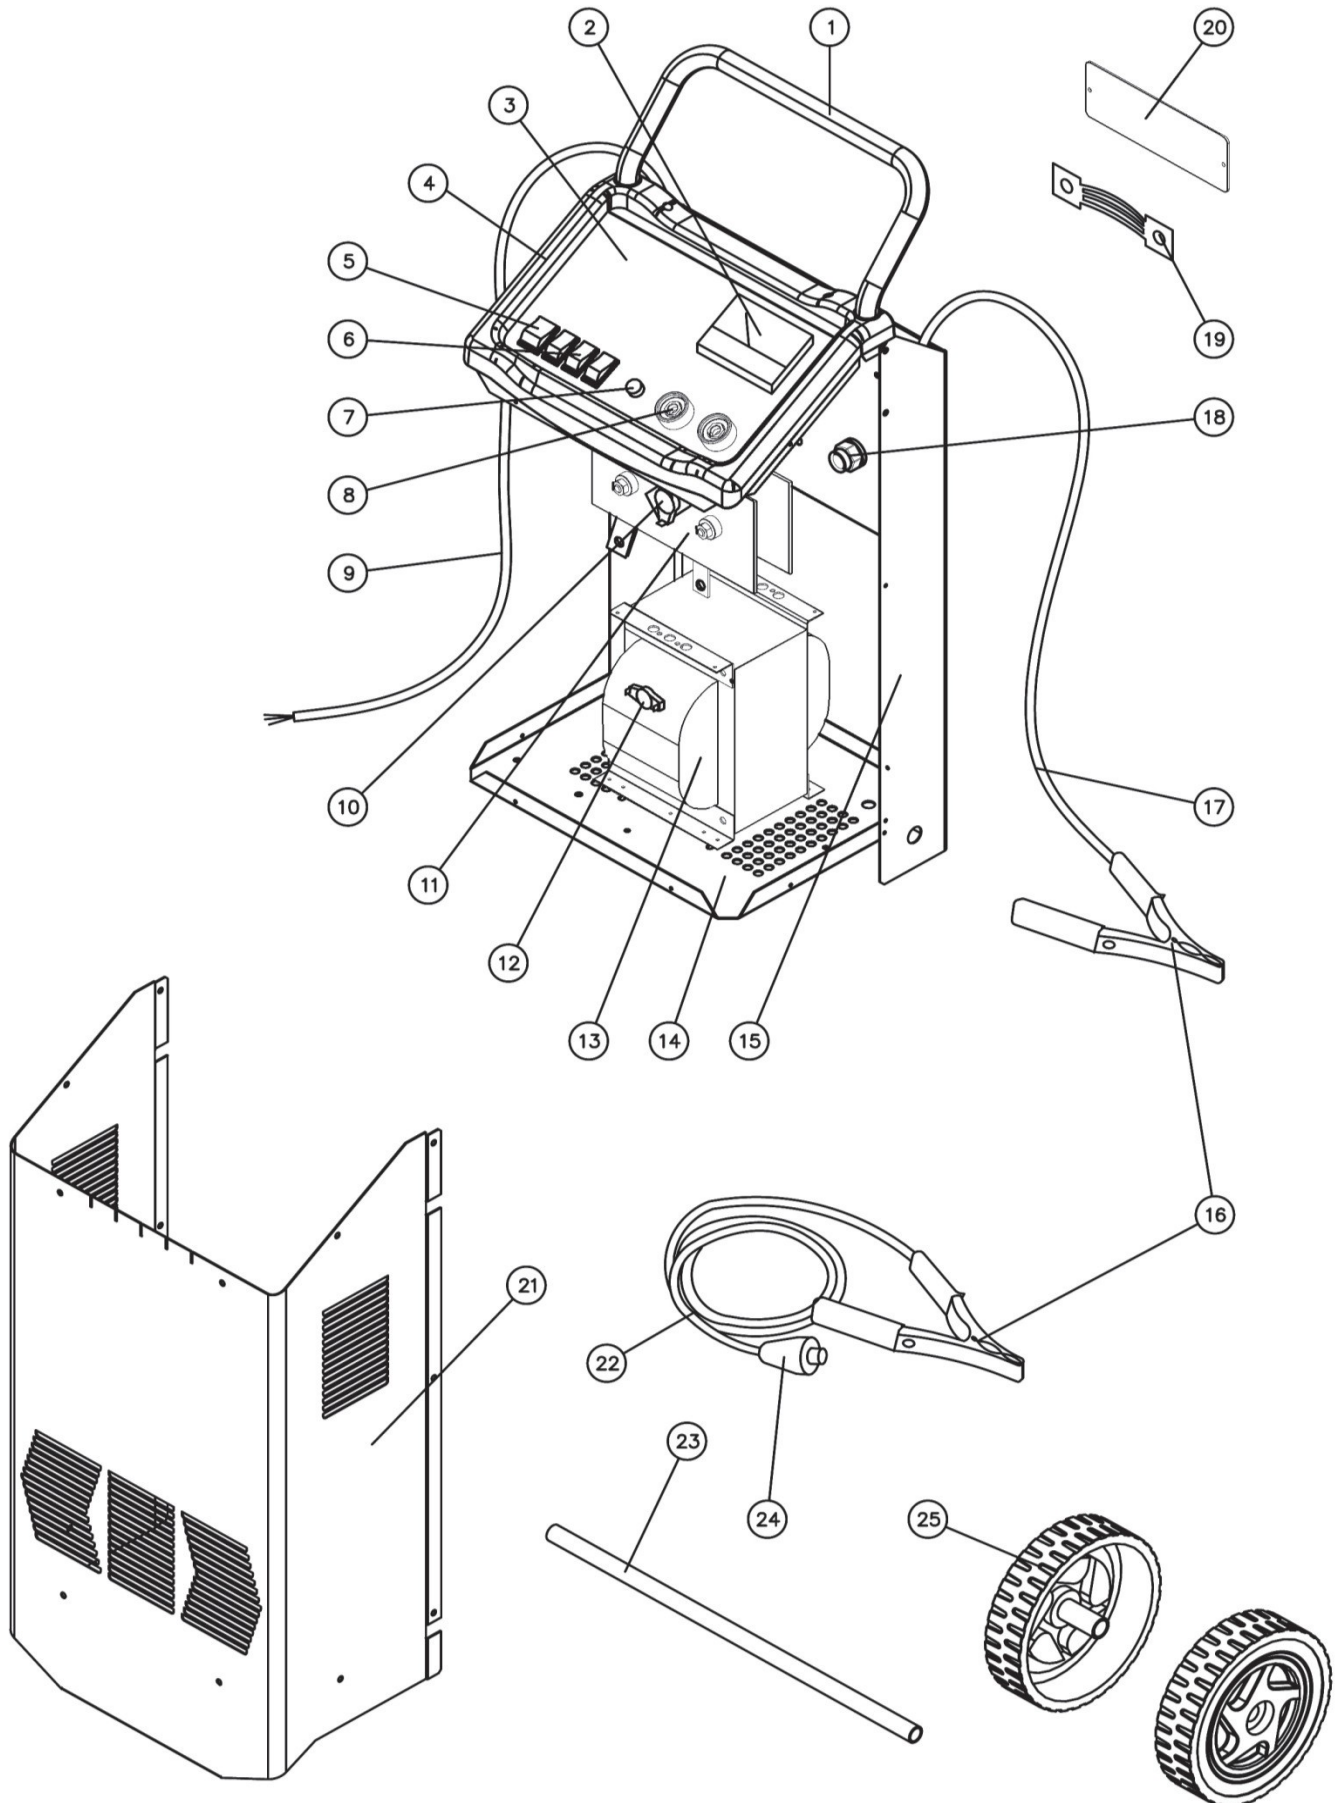

Ref. No.	Description	SIP Part No.	Ref. No.	Description	SIP Part No.
1.	Handle	PW02-00083	14.	Lower panel	PW02-00100
2.	Ammeter 50A/start	PW02-00018	15.	Rear panel	PW02-00102
3.	Front panel	PW02-00118	16.	Red/Black clamps	PW02-00072
4.	Front frame (plastic)	PW02-00098	17.	Black cable	PW02-00067
5.	On/Off switch	PW02-00022	18.	Cable gland	PW02-00081
6.	High/Low switch 16a	PW02-00021	19.	Fuse 200a	PW02-00007
7.	Orange pilot lamp	PW02-00039	20.	Fuse cover	PW02-00012
8.	Dinse socket 25sqmm	PW02-00105	21.	Front cover	PW02-00086
9.	Mains lead	PW02-00114	22.	Red cable	PW02-00059
10.	Thermostat (rectifier)	PW02-00027	23.	Axle D16 L412	PW02-00107
11.	Rectifier PMS12/2/2	PW02-00036	24.	Dinse plug 25sqmm	PW02-00106
12.	Thermostat (transformer)	PW02-00029	25.	Wheel D150	PW02-00109
13.	Transformer	PW02-00051	N/A.	Wheel clip	PW02-00144