


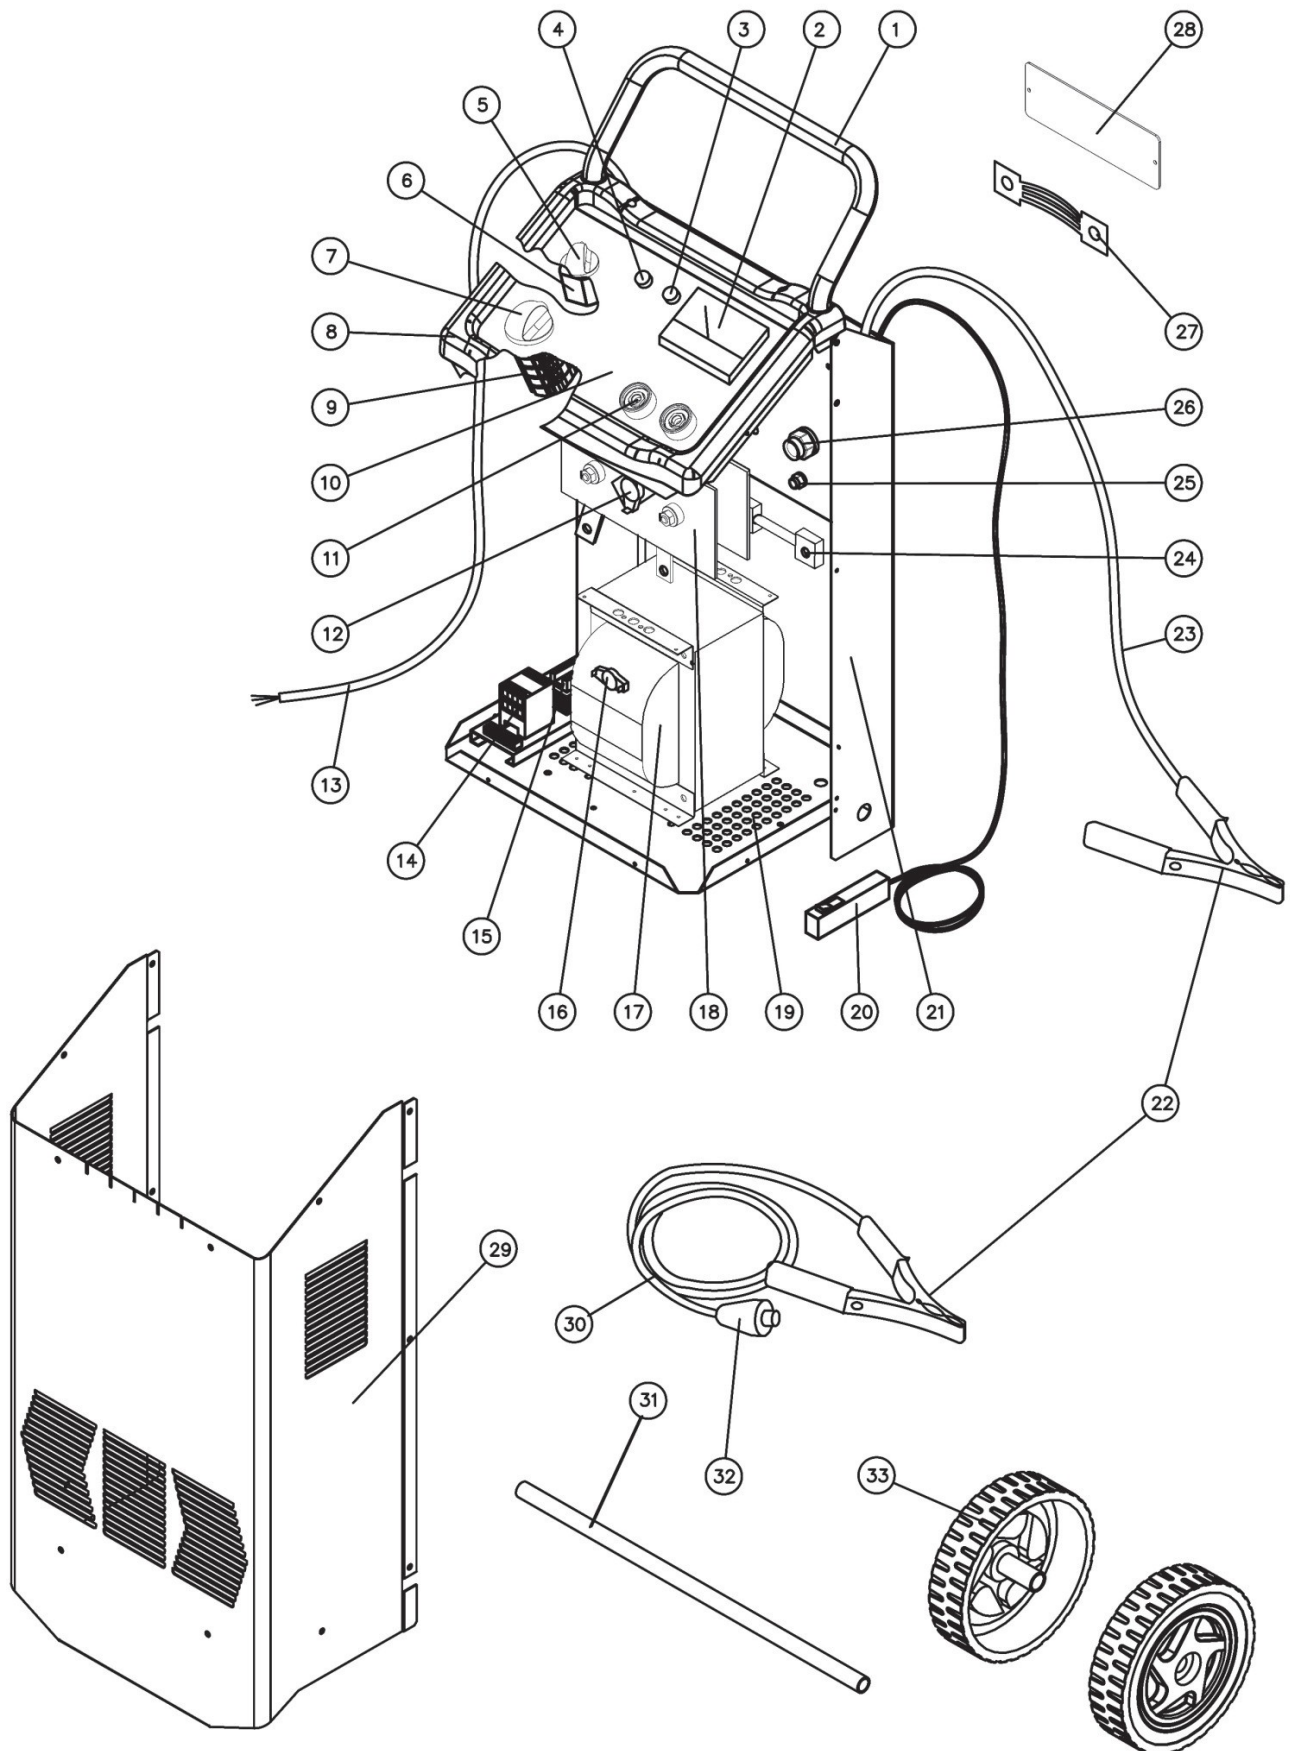

Ref. No.	Description	SIP Part No.	Ref .No.	Description	SIP Part No.
1.	Handle	PW02-00083	18.	Rectifier PMS20/2/2	PW02-00037
2.	Ammeter 50/400A	PW02-00019	19.	Lower panel	PW02-00100
3.	Orange pilot lamp	PW02-00040	20.	Remote control cable (without plug)	PW02-00077
4.	Green pilot lamp	PW02-00041	21.	Rear panel	PW02-00103
5.	Timer knob	PW02-00043	22.	Red/Black clamps	PW02-00073
6.	Timer	PW02-00042	23.	Black cable	PW02-00069
7.	Switch knob	PW02-00024	24.	Shunt 100a 60mw	PW02-00076
8.	Front frame (plastic)	PW02-00098	25.	Cable clamp	PW02-00078
9.	Switch 12a sch9387	PW02-00023	26.	Cable clamp	PW02-00081
10.	Front panel	PW02-00095	27.	Fuse 300a	PW02-00008
11.	Dinse socket 25sqmm	PW02-00105	28.	Fuse cover	PW02-00012
12.	Thermostat (rectifier)	PW02-00027	29.	Front cover	PW02-00088
13.	Mains lead	PW02-00114	30.	Red cable	PW02-00061
14.	Contactora 24v 16a	PW02-00074	31.	Axle D16 L447	PW02-00108
15.	Aux transformer	PW02-00075	32.	Dinse plug 25sqmm	PW02-00106
16.	Thermostat (transformer)	PW02-00028	33.	Wheel D175	PW02-00110
17.	Transformer	PW02-00053	N/A.	Wheel clip	PW02-00144