


25151 - SIP T14000 Silenced Diesel Generator Exploded Diagram & Parts List

TD007

Issue v2

Date: 28/04/2022

GENERATOR

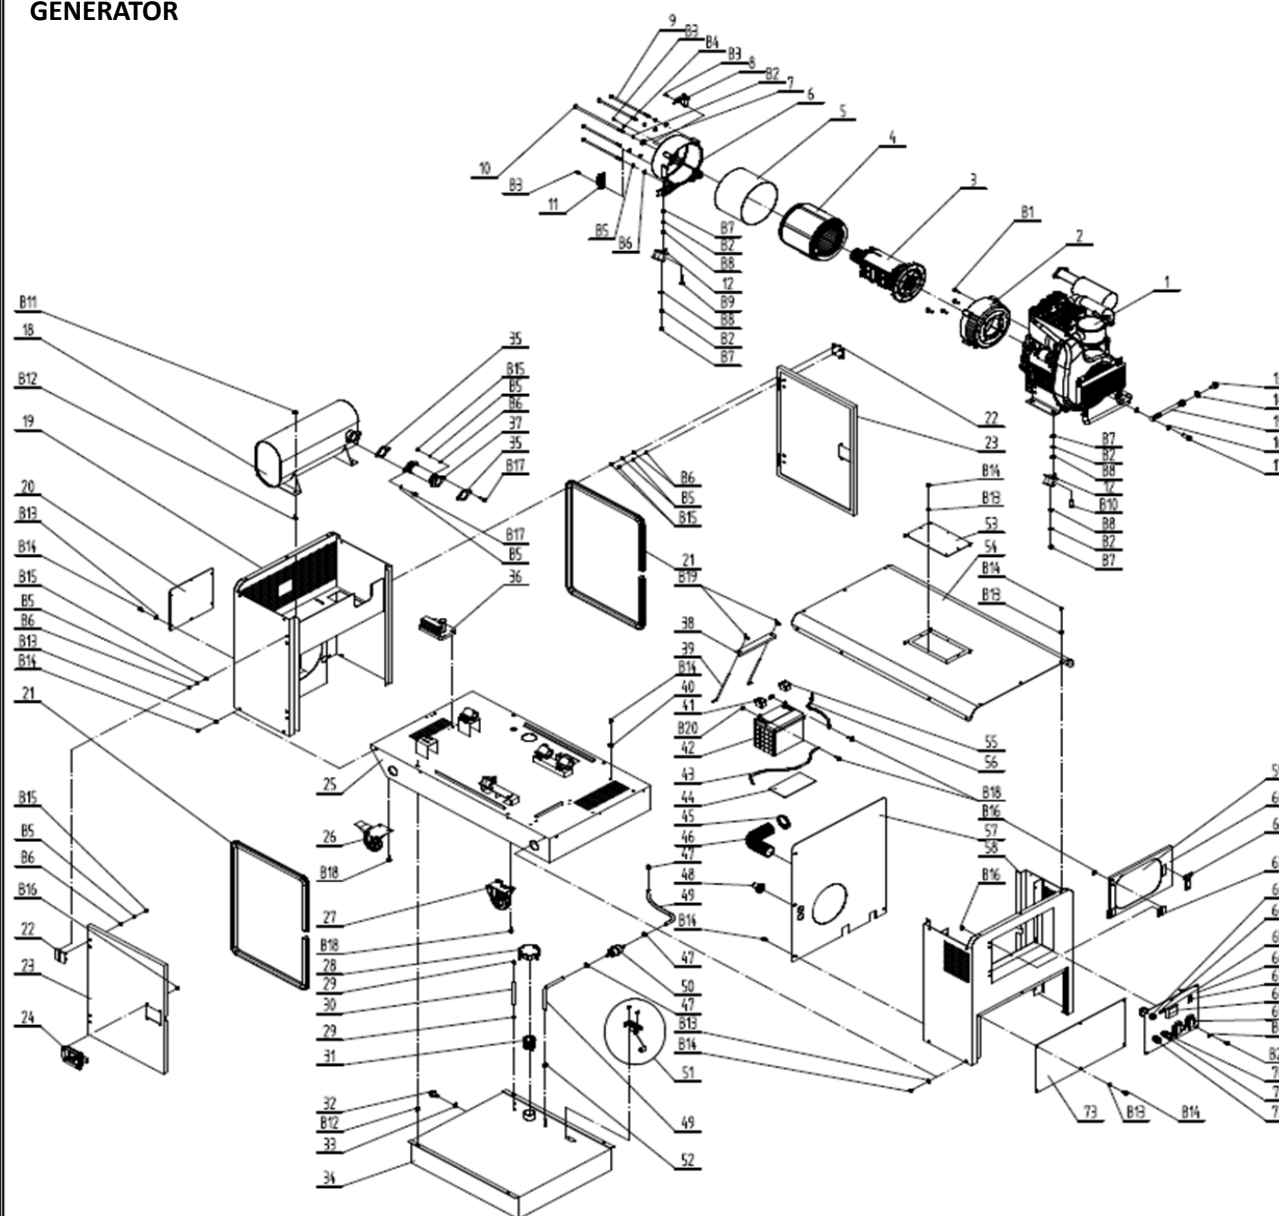

*Engine spare part list available on request.

25151 - SIP T14000 Silenced Diesel Generator Exploded Diagram & Parts List

TD007

Issue v2

Date: 28/04/2022

No.	Description	Code
1	Engine	PW01-02182
2	Front Cover	PW01-02183
3	Rotor assy	PW01-02184
4	Stator assy	PW01-02185
5	Alternator protective belt	PW01-02186
6	Rear cover	PW01-02187
7	Rotor bolt washer	PW01-02188
8	Carbon brush assy	PW01-02189
9	Stator bolt	PW01-02190
10	Rotor center bolt	PW01-02191
11	Wire connect board	PW01-02192
12	Vibration damper washer	PW01-02193
13	Flange bolt	PW01-02194
14	Combined seal gasket	PW01-02195
15	Oil extract pipe	PW01-02196
16	Combined seal gasket	PW01-02197
17	Hinge Joint Bolt	PW01-02198
18	Muffler	PW01-02199
19	Rear closure plate	PW01-02200
20	Battery closure plate	PW01-02201
21	Seal rubber strip	PW01-02202
22	Door hinge	PW01-02203
23	Soundproof enclosure	PW01-02204
24	Door lock assy	PW01-02205
25	Bottom	PW01-02206
26	4 inch nylon universal wheels	PW01-02207
27	4 inch nylon fixed wheels	PW01-02208
28	Fuel tank cap assy	PW01-02209
29	Fuel pipe clip	PW01-02210
30	Fuel pipe	PW01-02211
31	Fuel filter cup	PW01-02212
32	Oil drain plug	PW01-02213

No.	Description	Code
33	Oil drain plug washer	PW01-02214
34	Fuel tank	PW01-02215
35	Muffler gasket	PW01-02216
36	Muffler connect pipe	PW01-02217
37	AVR	PW01-02218
38	Battery plate	PW01-02219
39	Hook bolt	PW01-02220
40	Wind guide plate vibration damper	PW01-02221
41	Black battery wire sleeve	PW01-02222
42	Battery	PW01-02223
43	Black battery wire	PW01-02224
44	Rubber plate for battery	PW01-02225
45	Hose clamp	PW01-02226
46	Nylon hose	PW01-02227
47	Oil-conveying pipe clamp	PW01-02228
48	Rubber bush	PW01-02229
49	Fuel conveying pipe	PW01-02230
50	Fuel filter	PW01-02231
51	Fuel indicator	PW01-02232
52	Fuel conveying pipe clamp	PW01-02233
53	Air filter maintenance board	PW01-02234
54	Upper plate	PW01-02235
55	Red battery wire sleeve	PW01-02236
56	Red battery wire	PW01-02237
57	Wind dummy plate	PW01-02238
58	Front closure plate	PW01-02239
59	Control gate glass	PW01-02240
60	Control door	PW01-02241
61	Door holder	PW01-02242
62	Door hinge	PW01-02243
63	Lock	PW01-02244

25151 - SIP T14000 Silenced Diesel Generator Exploded Diagram & Parts List

TD007

Issue v2

Date: 28/04/2022

No.	Description	Code
64	Indicating lamp(red)	PW01-02245
65	Indicating lamp(green)	PW01-02246
66	Control panel	PW01-02247
67	Air breaker	PW01-02248
68	AC voltmeter	PW01-02249
69	Sockets	PW01-02250
70	Earthing bolt assy	PW01-02251
71	Black DC wiring pole	PW01-02252
72	Red DC wiring pole	PW01-02253
73	Maintaining board at the engine side	PW01-02254
B1	Flange bolt	PW01-02255
B2	Spring washer	PW01-02256
B3	Flange bolt	PW01-02257
B4	Tooth type gasket	PW01-02258
B5	Spring washer	PW01-02259
B6	Plain washer	PW01-02260
B7	Hexagonal nut GB/T6170	PW01-02261
B8	Plain washer	PW01-02262
B9	Flange bolt	PW01-02263
B10	Flange bolt	PW01-02264
B11	Flange nut	PW01-02265
B12	Flange bolt	PW01-02266
B13	Plain washer	PW01-02267
B14	Flange bolt	PW01-02268
B15	Hexagonal nut	PW01-02269
B16	Flange nut	PW01-02270
B17	Flange bolt	PW01-02271
B18	Flange bolt	PW01-02272
B19	Butterfly nut	PW01-02273
B20	Flange nut	PW01-02274
B21	Flange bolt	PW01-02275