



AIR OPERATED JACKS

MODEL NO'S: **YAJ301.V3, YAJ10-25LR,
YAJ15-30LE.V2, YAJ20-60LR.V2,
YAJ10-40LELR.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear protective
gloves



Wear safety
footwear

1. SAFETY

- ✓ Disconnect jack from air supply before changing parts, servicing or performing any maintenance.
- **WARNING!** Ensure correct air pressure is maintained and not exceeded.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use, and ensure that all connections are secure.
- ✓ Ensure jack is kept clean and in good working order. Repair or replace damaged parts immediately.
- ✓ Use recommended parts only. Incorrect parts may be dangerous and will invalidate the warranty.
- ✓ Use a qualified person to lubricate and maintain the jack.
- ✗ **DO NOT** use brake fluid to top up system. Use Sealey hydraulic oil only.
- ✓ Locate jack in a suitable, well lit work area. Keep area clean and tidy and free from unrelated materials.
- ✓ Use jack on level & solid ground, preferably concrete. Avoid tarmac since jack may sink in.
- ✓ Place chocks under wheels of vehicle.
- ✓ Ensure the vehicle handbrake is engaged (or in "PARK" mode), and switch the engine off.
- ✓ Ensure minimum distance of 0.5m between vehicle as it tilts & static objects such as doors, walls, etc.
- ✓ Ensure all non essential persons keep a safe distance and that there are no passengers in the vehicle to be jacked up.
- ✓ Place jack under vehicle manufacturer's recommended jacking points (see vehicle handbook).
- ✓ Check that the jacking point is stable and centred on the jack saddle and is free from grease or oil.
- ▲ **DANGER:** Use jack for lifting only, **NOT** for supporting the raised load. Use correctly rated axle stands under vehicle before proceeding with task.
- ✗ **DO NOT** apply your body weight to the handle during jacking.
- ✓ The handle is only for moving the jack to and from the lifting location.
- ✗ **DO NOT** operate the jack if parts are missing or damaged.
- ✗ **DO NOT** exceed the rated capacity of the jack.
- ✗ **DO NOT** allow the vehicle to move during lifting.
- ✗ **DO NOT** jack a vehicle which may result in the spillage of fuel, battery acid, or dangerous substances.
- ✗ **DO NOT** work under the vehicle until axle stands have been positioned correctly.
- ✗ **DO NOT** use the jack for purposes other than those for which it is designed.
- ✗ **DO NOT** adjust the safety overload valve.
- ✗ **DO NOT** snatch the hose from the air supply, and **DO NOT** direct air from the air hose at yourself or others.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ When not in use disconnect jack from the air supply, and store in the lowered position in a safe, dry, childproof area.
- **WARNING!** Turn off air supply and de-pressurise the control nozzle before removing the pump unit from any installation or mobile system.
- ✓ Failure to comply with this instruction may damage the unit and will invalidate your warranty.

2. INTRODUCTION

Ideal for workshop or roadside use, these jacks take the effort out of lifting heavy plant, tractors and commercial vehicles. For extra safety, all models feature dead man's handle which also aids controlled lowering speed. All models supplied with extensions that close the gap between the saddle of the jack and the jacking point.

3. SPECIFICATION

Model No	YAJ301.V3	YAJ10-25LR	YAJ15-30LE.V2	YAJ20-60LR.V2	YAJ10-40LELR.V3
Max. Capacity	30tonne	25tonnes	30tonne	60tonnes	40tonne
Min. Height	210mm	185mm	150mm	175mm	125mm
Maximum Height (inc. Extensions)/Capacity:					
Stage 1 (mm/tonne)	463/30	402/25	343/30	377/60	302/40
Stage 2 (mm/tonne)	-	497/10	409/15	458/40	347/20
Stage 3 (mm/tonne)	-	-	-	542/20	396/10
Piston Stroke	133mm	192mm	139mm	247mm	151mm
Extensions	45/75mm	45/75mm	45/75mm	45/75mm	45/75mm
Chassis Length	490mm	770mm	810mm	875mm	830mm
Max. Length incl. handle	1700mm	2150mm	2190mm	2225mm	2210mm
Width with out wheels	176mm	161mm	215mm	215mm	179mm
Overall Width	290mm	282mm	295mm	295mm	282mm
Air Consumption	10.5cfm	11.5cfm	11.5cfm	11.5cfm	11.5cfm
Working Pressure	116-174psi	116-174psi	116-174psi	116-174psi	116-174psi
Weight	47kg	57kg	52kg	71kg	54kg




4. ASSEMBLY

4.1. Attaching the Handle

- 4.1.1. Remove a circlip from either side of the large pin (fig.1A).
- 4.1.2. Slide out the pin and place the handle into the opening. Slide the pin back through the jack, lining up the handle and through the other side. Secure with circlips.

4.2. Air Hoses

- 4.2.1. Screw in the black and clear hoses from the handle into the jack ensuring the black and clear hoses are wrapped around the handle, inserting as shown by the label positioned beneath the connection points on the jack (fig.2). Position so as not to obstruct the movement of the handle.

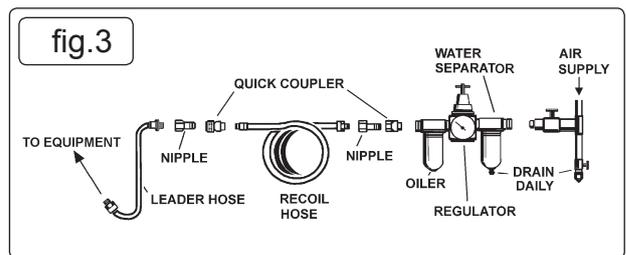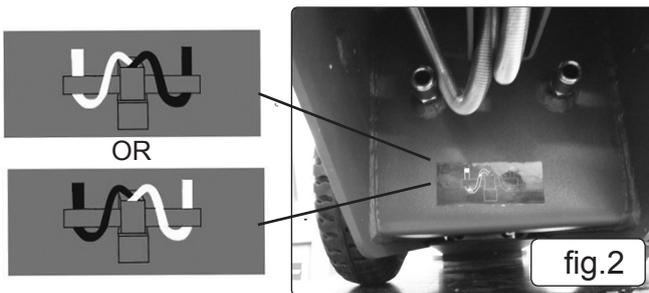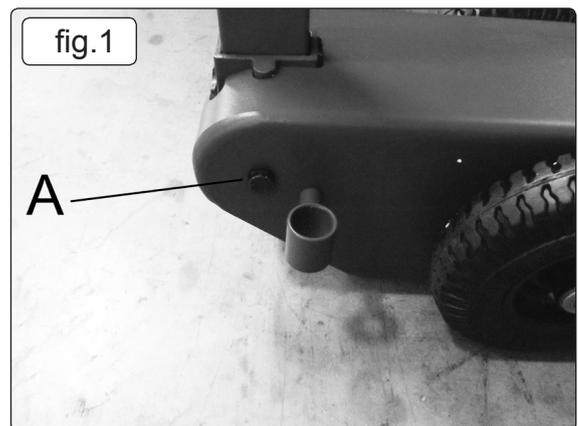

5. AIR SUPPLY

- 5.1. Ensure that the jack pneumatic switch is in the "off" position before connecting to the air supply. fig.4.
- 5.2. You will require an air pressure of between 116psi and 174psi and an air flow of 11.5cfm (10.5cfm for YAJ301) to get the best performance from this jack.
 - ❑ **WARNING!** Ensure the air supply does not exceed the stated maximum pressure while operating the jack. Too high an air pressure and unclean air will shorten the products life due to excessive wear, and may be dangerous causing possible damage and personal injury.
- 5.3. Drain the air tank daily. Water in the air line will damage the jack.
- 5.4. Clean the air inlet filter screen weekly.
- 5.5. Keep the air hose between the compressor and the air jack as short as possible, and install an air filter and oiler (fig.3).
- 5.6. Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 3/8" I.D. and fittings must have the same inside dimensions.
- 5.7. Keep hose away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.

6. OPERATION

6.1. PREPARATION

- 6.1.1. Check that the air supply meets the requirements set out in section 5.
- 6.1.2. Connect the air supply to the connector (fig.5.B).
- 6.1.3. Set the handle to the required angle using the handle release lever shown in (fig.5.A). Pull the lever upwards towards the main handle. Move the handle to the required position and release the lever to lock it into position.

6.2. PURGING THE SYSTEM

Before using the jack, purge the hydraulic circuit in order to eliminate any possible air that may have entered the system during transit.

- 6.2.1. Push the control lever (fig.4) to the 'down' (fig.4.A) position and hold it there for several seconds. Release the lever to the centre 'hold' position.
- 6.2.2. Now push the lever to the 'up' position (fig.4.B) and hold it there until the jack is fully extended. Push the lever to the 'down' (fig.4.A) position and watch the jack as it retracts. The lowering movement should be smooth and without irregular stops.
- 6.2.3. Repeat the raising and lowering cycle until the movement is smooth. Once this has been achieved this indicates that all air has been expelled.



6.3. USING THE JACK

- ❑ **WARNING!** ensure you have read and understood the safety instructions in section 1 before commencing work. Position the jack under the vehicle manufacturer's recommended jacking point (see vehicle handbook). Note: Use the extension pins (fig.5.D) to get the jack closer to the jacking point before engaging the jack. See specification for capacity when using the extension pins.

- 6.3.1. Whilst holding the main jack handle, lifting is achieved by pushing the control lever to the 'up' position (fig.4.B).
- 6.3.2. When the vehicle has reached the desired height release the control lever which will automatically return to the middle hold position stopping any further air flow, holding the jack at the height to which it has been raised.
- 6.3.3. Place axle stands correctly in position and ensure section 1 safety instructions are strictly applied before performing any task.

6.4. LOWERING THE JACK

- 6.4.1. Ensure there are no persons or obstruction beneath the vehicle before lowering, and remove any axle stands.
- 6.4.2. Whilst holding the main jack handle lowering is achieved by pushing the control lever to down position (fig.4.A), the jack will lower in a controlled manner.
- 6.4.3. Once completely lowered releasing the control lever will return to the middle hold position. Remove the jack from under the vehicle. If you have finished using the jack, turn the air pressure supply off and disconnect from the air line and store the jack and air line accordingly.

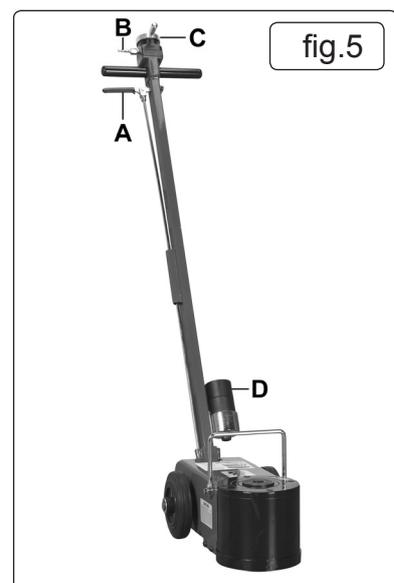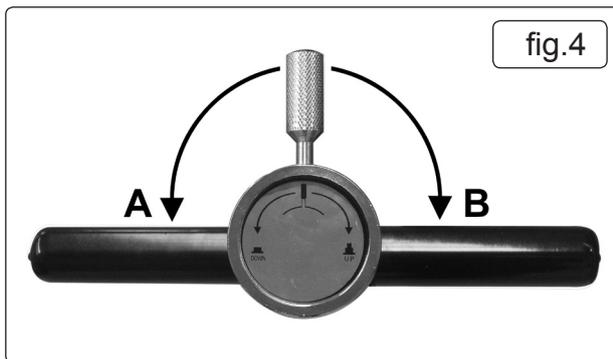

7. MAINTENANCE

IMPORTANT: Only fully qualified personnel should attempt maintenance or repair.

- ❑ **WARNING!** Disconnect jack from air supply before changing parts, servicing or performing any maintenance.
- 7.1. When the jack is not in use, the piston must be in the lowest position to minimise corrosion.
- 7.2. Keep the jack clean and lubricate all moving parts with air tool oil on a regular basis.
- 7.3. To check oil level, lower jack fully. Remove the filler plug (see fig.6 for YAJ301 or fig.7 for other models). The oil surface should be level with the indicator inside the filler hole, for YAJ301 it should be level with the bottom of the filler hole. Top up the oil level if necessary but do not overfill as the jack will become inoperative. If inadvertently overfilled the excess oil should be poured off. After topping up or pouring off excess oil it may become necessary to purge air from the unit. See section 6.2.
- ❑ **WARNING! DO NOT** use brake fluid, or any fluid other than hydraulic jack fluid as this may cause serious damage to the jack and will invalidate the warranty!
- 7.4. Ensure the air filter located in the air valve is clean.
- 7.5. Should the piston not rise and the oil level is correct, this may indicate a problem with air seeping into the hydraulic valve passage. Purge any air from the system. See 6.2
- 7.6. Confirm that the piston can rise to the highest position.
- 7.7. Before each use check for broken, cracked, bent, or loose parts; any visible damage to welds, piston, pump, saddle, air connector, levers, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found, remove jack from service and take necessary action to fix the problem. **DO NOT** use the jack if believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.
- 7.8. After a year of extensive use, the oil should be replaced in order to extend the life of the jack. To drain the oil, remove the filler plug and valve. Make sure that no dirt is allowed to enter the hydraulic system. See 7.3. for refilling instructions.
- 7.9. Periodically check the pump piston and piston rod for signs of corrosion. Clean exposed areas with a clean oiled cloth.



fig.6



fig.7

8. TROUBLESHOOTING

Problem	Possible Cause	Remedy
Jack does not lift but pump is working.	<ol style="list-style-type: none"> 1. Oil exhausted. 2. Air in hydraulic system. 3. Defective suction or delivery valves. 4. Defective packaging or O-ring. 5. Poor quality oil. 	<ol style="list-style-type: none"> 1. Top oil up 2. Drain air by opening cap plug or suction and delivery valves. 3. Clean clogged valve. 4. Replace. 5. Replace oil.
Air pump does not operate.	<ol style="list-style-type: none"> 1. Insufficient compressor power. 2. Pump oil used up. 	<ol style="list-style-type: none"> 1. Use a larger compressor. 2. Find leak and rectify, refill with oil. Rebuild and lubricate air valve.
Jack stops before end of travel.	<ol style="list-style-type: none"> 1. Hydraulic oil is insufficient. 	<ol style="list-style-type: none"> 1. Replenish oil.
Jack lowers or does not hold in the raised position.	<ol style="list-style-type: none"> 1. Defective suction delivery, release or safety valve. 2. Defective piston packing. 	<ol style="list-style-type: none"> 1. Clean and adjust valve. 2. Replace packing.
Lifting is slow.	<ol style="list-style-type: none"> 1. Air leakage due to worn servo-valve. 	<ol style="list-style-type: none"> 1. Replace servo-valve.
Pump continues to operate when the air valves are closed.	<ol style="list-style-type: none"> 1. Air valve will not close. 	<ol style="list-style-type: none"> 1. Replace valve.

IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE MACHINE.

Owing to their size and weight, hydraulic products should ideally be repaired by local service agents. We have service / repair agents in most parts of the UK. Before returning your product please call our technical helpline on 01284 757505 for advice and troubleshooting guidance.

If the jack is under guarantee please contact your stockist.

DE-COMMISSIONING THE JACK

Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk