



Guide to Assembly & Usage


200kg Boltless Shelving Bay


Information

If in doubt, contact the supplier

 Read this Guide thoroughly before commencing assembly & retain for future reference


 Before commencing assembly, unpack carefully & check that all components ordered are included


 Assembly should be undertaken by two competent people


 Tools – Rubber faced mallet, screwdriver, or other flat bladed tool


Caution

During assembly, ensure to:

 Take care during assembly & in use, particularly when lifting or stretching & when using tools


 Wear suitable protective clothing – protective gloves and footwear are recommended


 Assemble & locate for use on a suitable level floor surface. Allow adequate working space


 Dispose of packaging materials responsibly


Warning


Rules for the safe use of shelving:


 Ensure these instructions are retained for reference & that users are aware of the rules for safe use

 NEVER CLIMB ON THE STRUCTURE OR STAND ON THE SHELVES


 DO NOT LEAN OR SUPPORT LADDERS, STEPS, OR OTHER OBJECTS AGAINST SHELVING

 DO NOT USE IN DAMP OR WET CONDITIONS

 LOAD HEAVY ITEMS ON THE LOWER SHELVES & LIGHTER ITEMS ON THE HIGHER SHELVES

 ENSURE THAT THE MAXIMUM LOAD CARRYING CAPACITIES ARE NOT EXCEEDED

 PLEASE REFER TO THE LOADING CHART SUPPLIED FOR DETAILS

 WE RECOMMEND THIS PRODUCT IS FIXED TO THE WALL




COMPONENT CHECK LIST

| Component | Quantity | 1780h x 1200w x 400d mm |
|-------------------|----------|-------------------------|
| Upright | 8 | SP-D4 |
| Front & Back Beam | 10 | SP-C6 |
| Side Beam | 10 | SP-B27 |
| Centre Support | 5 | SP-A18 |
| Chipboard | 5 | SP-CHIP200D |
| Upright Connector | 4 | SP-F5 |
| Feet | 4 | SP-RB1 |



If you have any missing components please take note of the part name, colour and code and contact your supplier

200kg Boltless Shelving Bay Assembly



1. Slot first short beam into post. Tap into place with rubber mallet

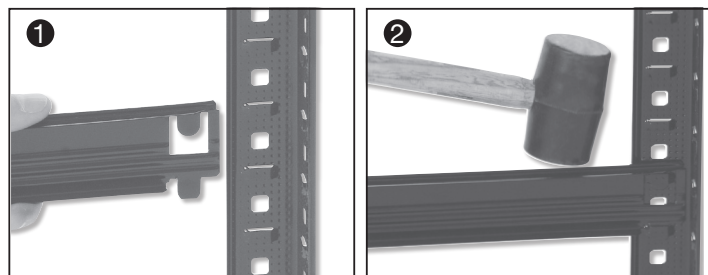


2. Assemble end frames with short side beams & join with long front & back beams

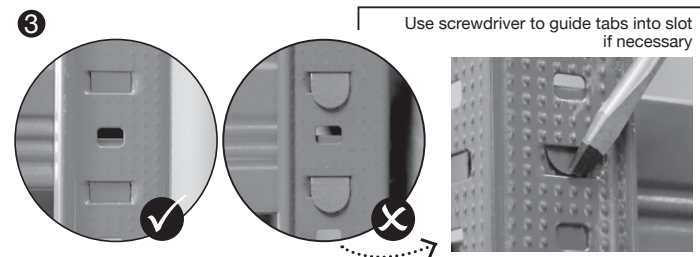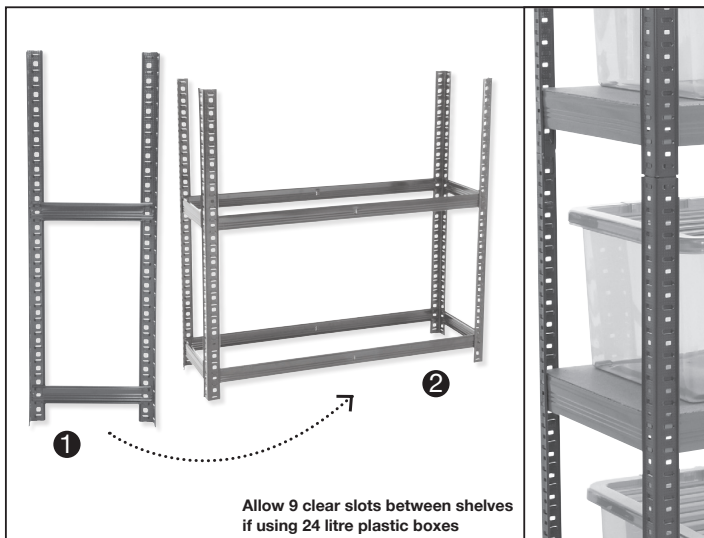

3. Bend centre support ends at right angles. Slot into front & back beams.

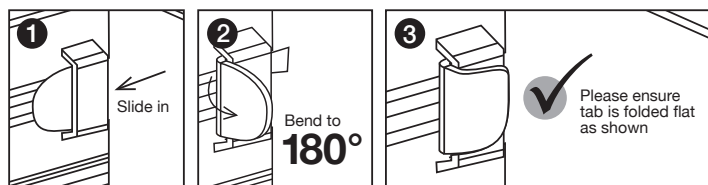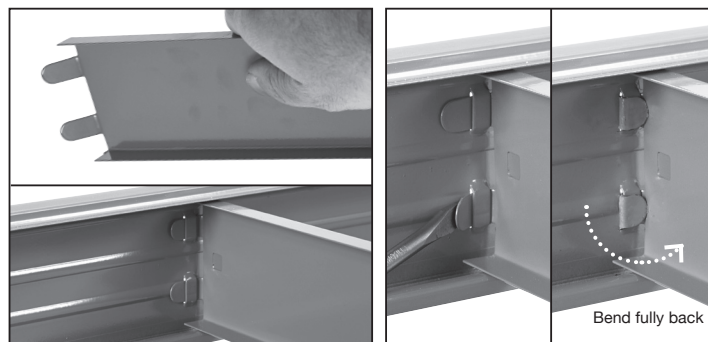

4. Slot upright connector into top of lower upright. Push top into place or tap down with mallet if necessary

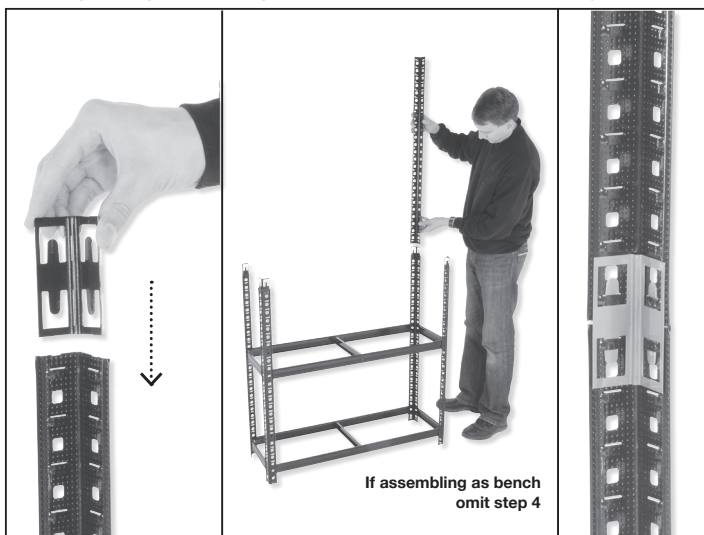

5. Repeat steps 2-3 to add remaining levels & insert chipboard decks



LOADING CHART

| LOADING CHART | |
|---------------|---------------------|
| Max load | Weight in kilograms |
| Per shelf | 200KG UDL |
| Per bay | 1000KG UDL |


All weight loadings relate to UDL (uniformly distributed loads).
The load capacity will be reduced if the shelves are loaded unevenly.

ACCESSORIES ALSO AVAILABLE

Bay Connectors

One set of 6 Bay Connectors joins 2 bays side by side or back to back for added stability

Code BC16

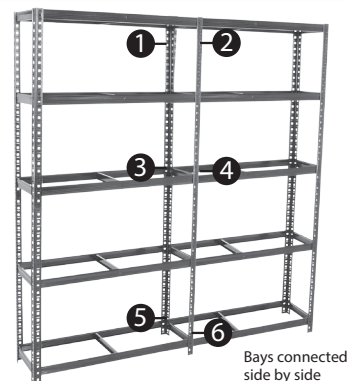

HOW TO FIT BAY CONNECTORS

