

# Guide to Assembly & Usage

## Chrome Trolley Assembly



### Information

If in doubt, contact the supplier



Read this guide thoroughly before commencing assembly and retain for future reference



Before commencing assembly, unpack carefully and check that all components ordered are included



Assembly should be undertaken by a minimum of two competent people



Tools – Small rubber mallet, small spanner (provided)



Assess for floor fixing. Tall narrow bays may require this to ensure stability



We recommend products over 2000mm high are fixed to the wall where possible



### Caution

During assembly, ensure to:



Take care during assembly and in use, particularly when lifting or stretching and when using tools



Wear appropriate safety clothing – protective gloves and footwear are recommended



Build on a suitable level floor, which is strong enough to support the load and allow adequate working space



Dispose of packaging materials responsibly



### Warning

Rules for the safe use of shelving:



Ensure these instructions are retained for reference and that users are aware of the rules for safe use



Never climb on the structure or stand on the trolley



Do not use in damp or wet conditions



Load heavy items on the lower shelves and lighter items on the higher shelves



This product is designed for hand loading only








Ensure that the maximum load carrying capacities are not exceeded



Please refer to the loading information supplied for details



### COMPONENT CHECK LIST

Component		Quantity
<b>A</b> Chrome Wire Shelf		1 per level
<b>B</b> Trolley Handle		2
<b>C</b> Plastic Shelf Retaining Clip		4 per level
<b>D</b> Castor with Expander Fitting		2
<b>E</b> Braked Castor with Expander Fitting		2

If you have any missing components please take note of the part name and contact your supplier

### Loading information


#### Chrome Trolley

IF YOU ARE IN ANY DOUBT REGARDING LOAD CAPACITIES, PLEASE CONTACT YOUR SUPPLIER

Chrome Trolley	
Maximum load per trolley	200kg
Capacities are common for all standard shelf depths.	

# Assembly - Chrome Trolley

- 1** Start by sliding one of the trolley levels to the top of the handles with the handle grips facing outwards

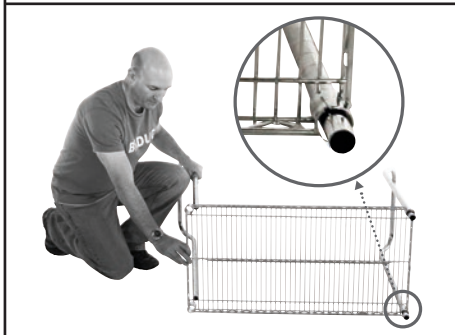


- 2** Decide how high you would like the top level to be and count the grooves in the handle upright. At this level place a plastic clip in the corresponding groove in the handle



- 3** Fit the second clip opposite the first so that they completely surround the handle upright




- 4** Repeat at the same level on all uprights and press shelf down on clips

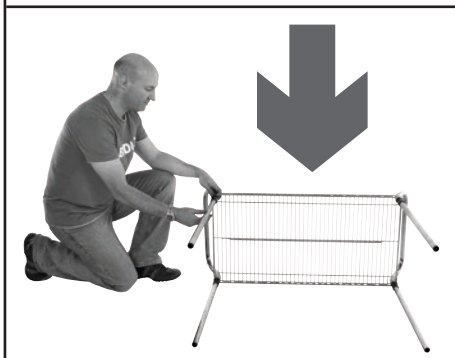

- 5** Decide what height you would like the next level to be and repeat the processes 1 - 4



- 6** Stand the trolley on its feet and tap shelf levels down with a rubber mallet

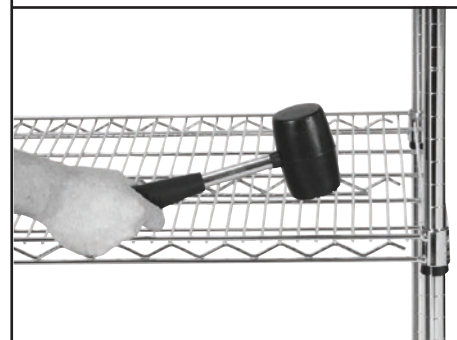

- 7** To fit castors, first unscrew the feet. Place washers over thread of castor and screw castor into bottom of each upright. Tighten with spanner.



- 8** *Tip: Fit both braked castors at the same end*



- 9** Your shelving bay is now complete

