
Guide to Assembly & Usage


newpo Industrial Workbench 300kg

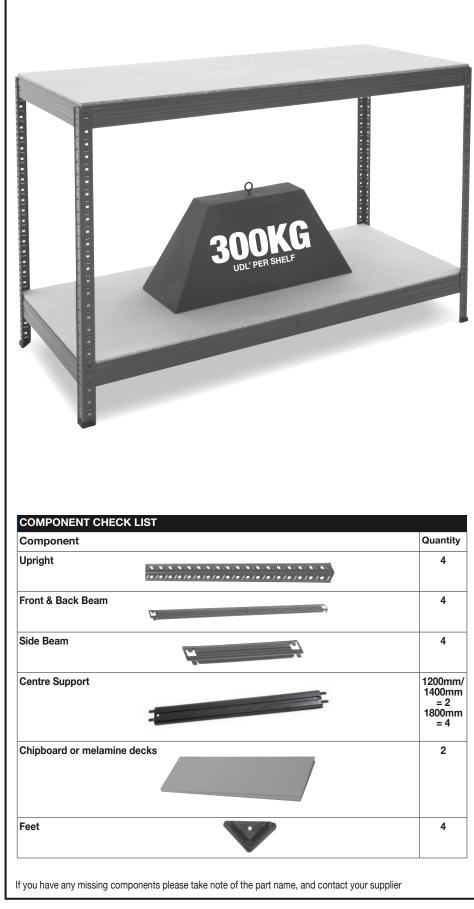




newpo Industrial Workbench 300kg Assembly


1. Slot first short beam into post. Tap into place with rubber mallet.

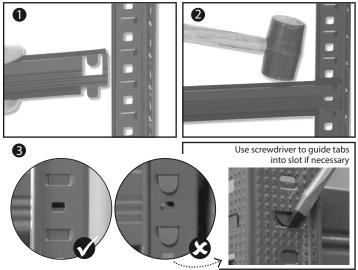


3. Bend centre support ends at right angles. Slot into long beams.

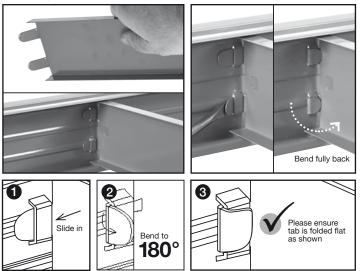

5. Push plastic protective feet onto each post.

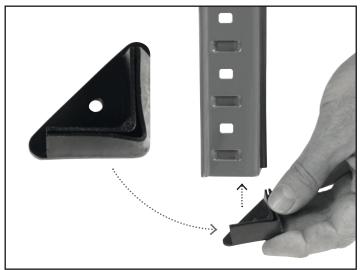

2. Assemble end frames with short beams & join with long front & back beams.

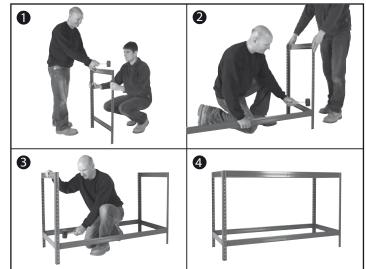

4. Insert decks onto steel frame.



Loading information

Newpo Industrial Workbench 300kg For any other layouts, please refer to your supplier for detailed capacities

Shelf load capacities Maximum permitted shelf capacities are based on UDL¹. Please note that the bay capacity may limit the maximum load per shelf:

IF YOU ARE IN ANY DOUBT REGARDING LOAD CAPACITIES, PLEASE CONTACT YOUR SUPPLIER [†]UDL = Uniformly Distributed Load

Newpo Industrial Workbench 300kg	
Maximum load	Weight in kg
Per Shelf	300kg
Per Bench	600kg