
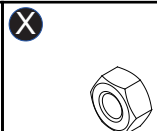
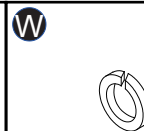
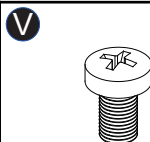
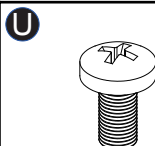
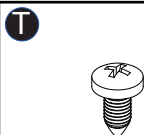
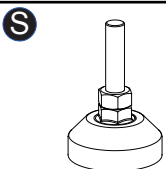
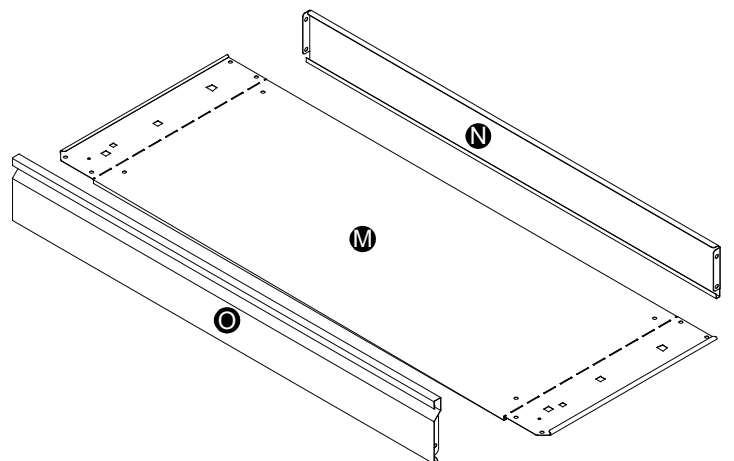
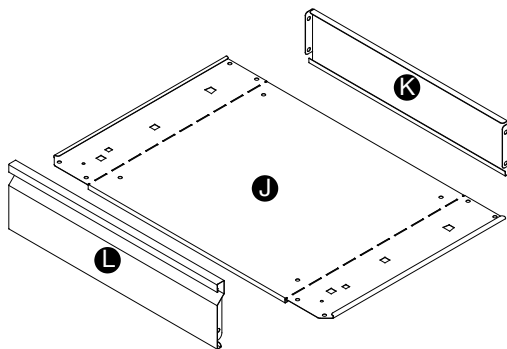


# Guide to Assembly & Usage

## newpo | Garage Drawer Cabinet Workbench | GLWB172


### COMPONENT CHECK LIST

Component	Quantity
<b>A</b> Worktop	1
<b>B</b> Left panel	1
<b>C</b> Right panel	1
<b>D</b> Left center panel	1
<b>E</b> Right center panel	1
<b>F</b> Base panel	1
<b>G</b> Rear panel	3
<b>H</b> Cross beam	1
<b>I</b> Cupboard door	3
<b>J</b> Small drawer base	1
<b>K</b> Small drawer back panel	1
<b>L</b> Small drawer front panel	1
<b>M</b> Large drawer base	1
<b>N</b> Large drawer back panel	1
<b>O</b> Large drawer front panel	1
<b>P</b> Left hand drawer runner	2
<b>Q</b> Right hand drawer runner	2
<b>R</b> Cupboard door stop	3
<b>S</b> Adjustable feet	4
<b>T</b> ST4.2x9 Screw	27
<b>U</b> M6x12 Bolt	18
<b>V</b> M6x10 Bolt	16
<b>W</b> M6 Spring washer	20
<b>X</b> M6 Nut	20

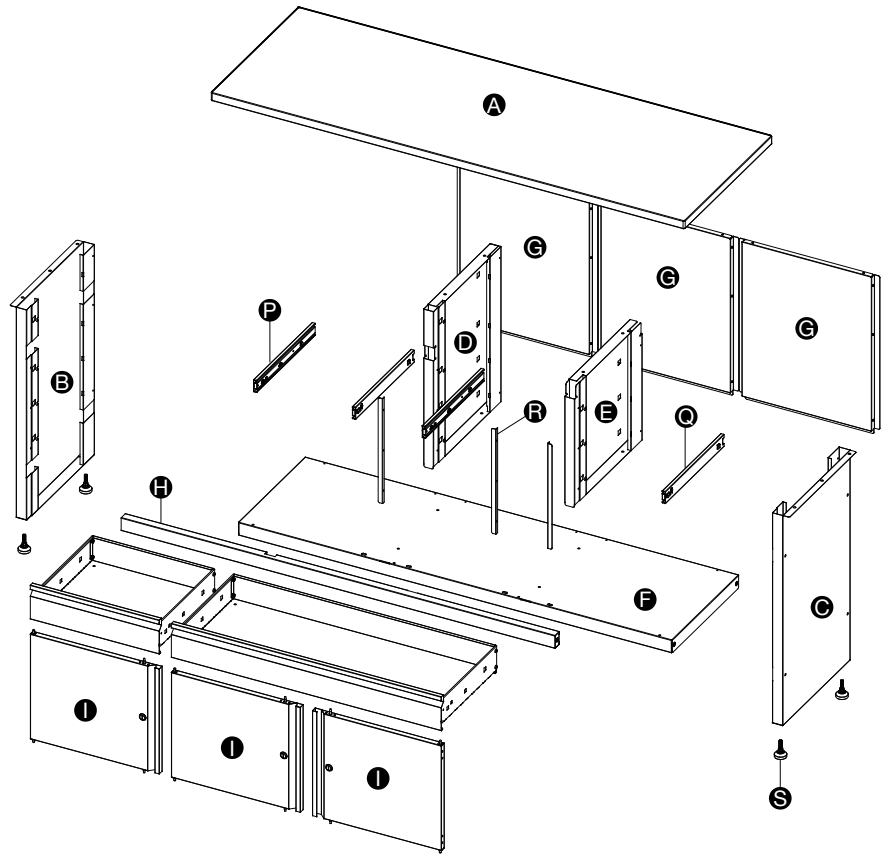


# Assembly newpo Garage Drawer Cabinet Workbench | GLWB172


**1** Fold drawer base **J** + **M**.

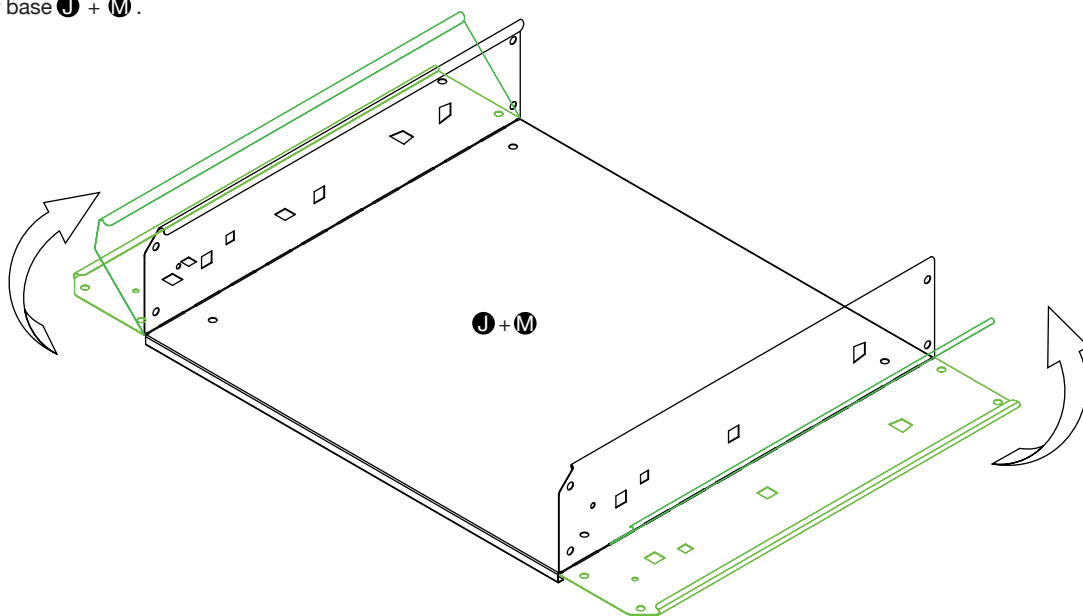

**2** Attach drawer back panels **K** + **N** and front panels **L** + **O** to the folded drawer bases use fixings **V** + **W** + **X**.

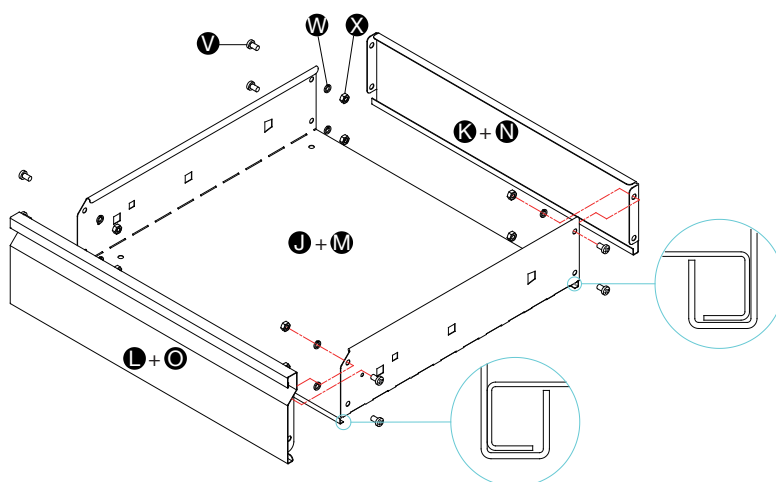


**3** Completed drawer.

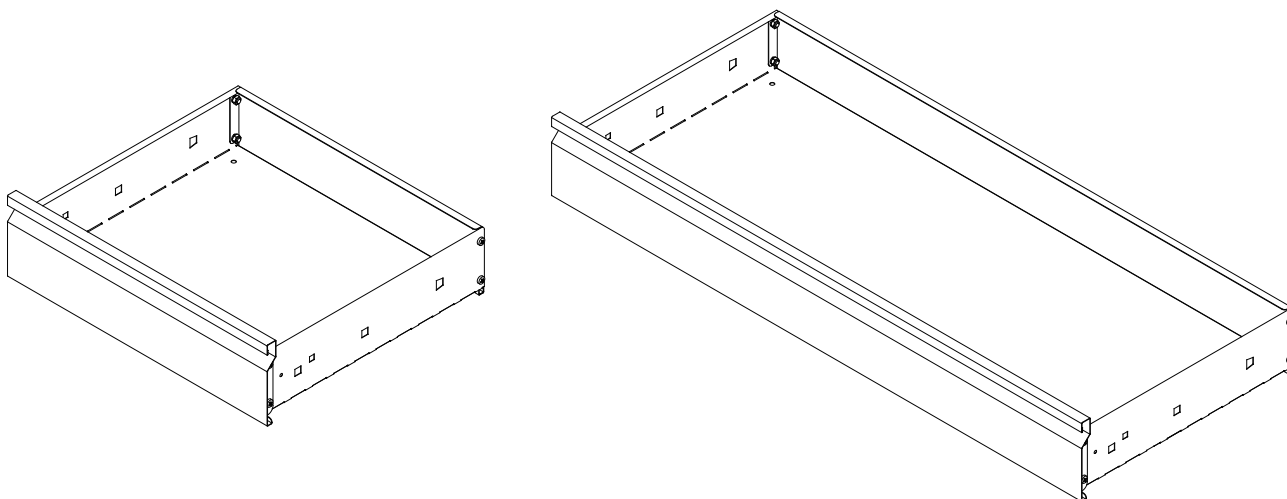


# Assembly newpo Garage Drawer Cabinet Workbench | GLWB172

- 4** Fit adjustable feet **S** to the left panel **B** and right panel **C**.

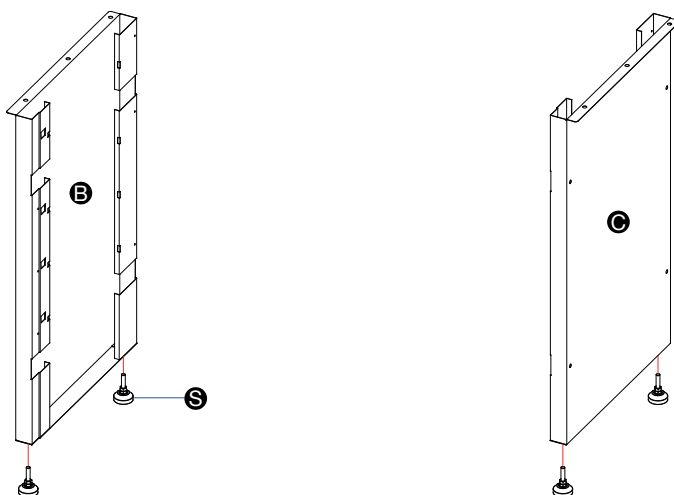


Please Note: Adjustable feet are for levelling purposes only and are not designed to raise the height of the worktop.

- 5** Fit center panels **D** + **E** to the base panel **F** and attach using fixing **U**, **W** and **X**.

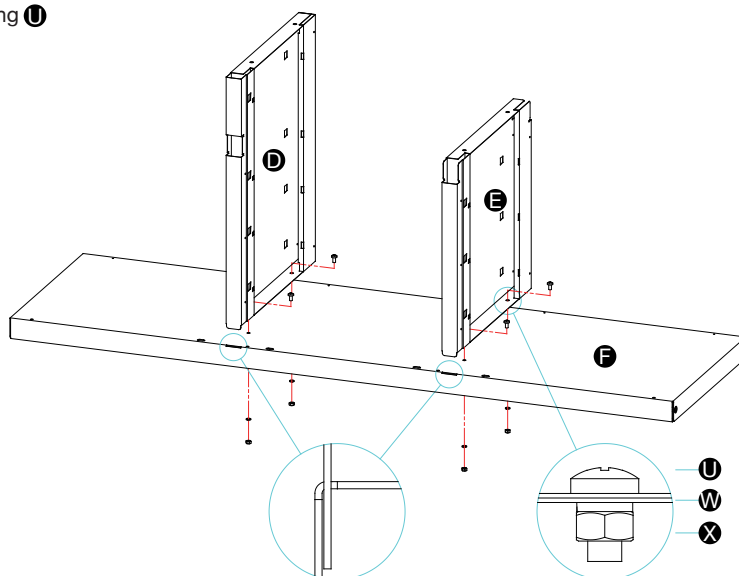


- 6** Insert panel **F** and cross beaming **H** into the left panel **B** and secure using fixings **U**. Repeat the process on the right panel **C**.

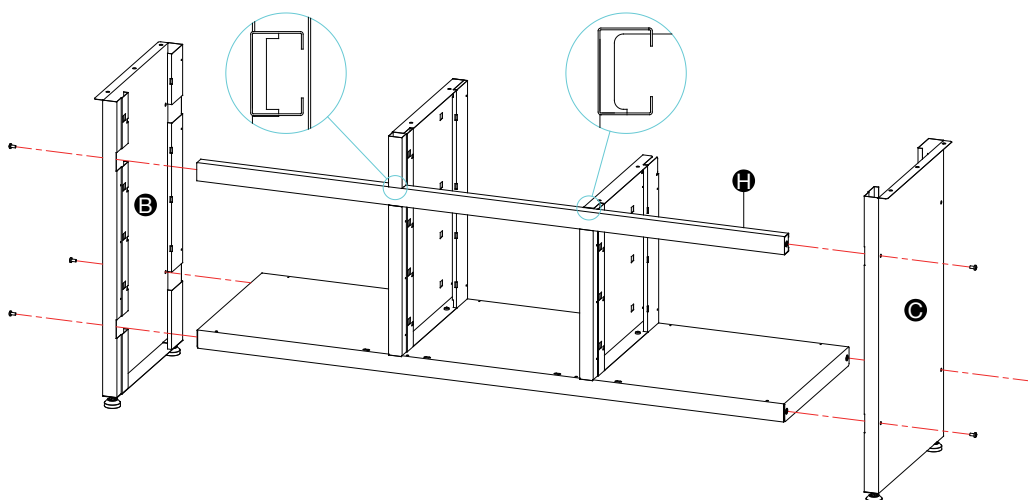


# Assembly newpo Garage Drawer Cabinet Workbench | GLWB172


**7** Fit rear panels **G** using fixings **T**.

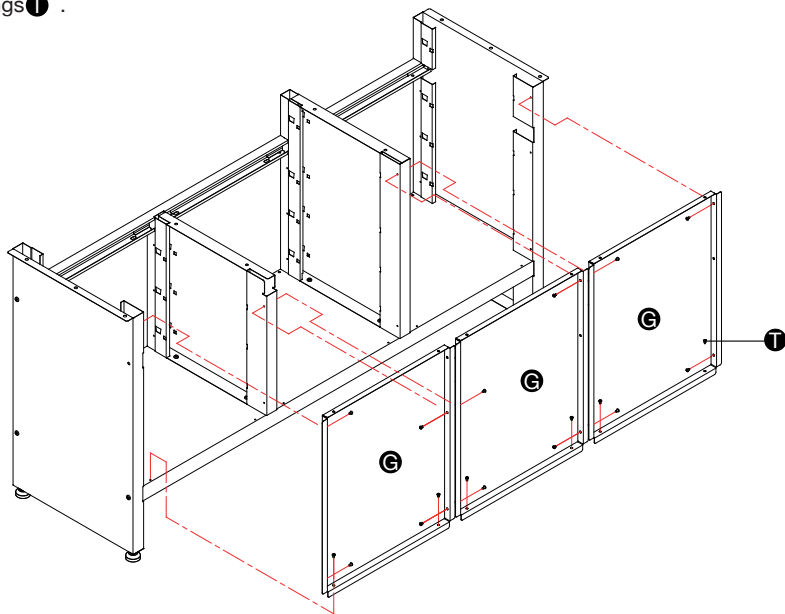

**8** Attach the worktop **A** using fixings **U**.

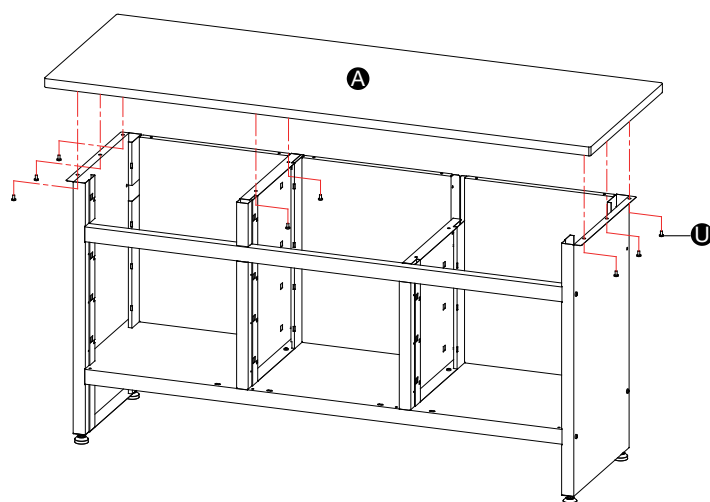


**9** Fit the rear section of each runner **P** + **Q** to the side panel and center panel as shown.

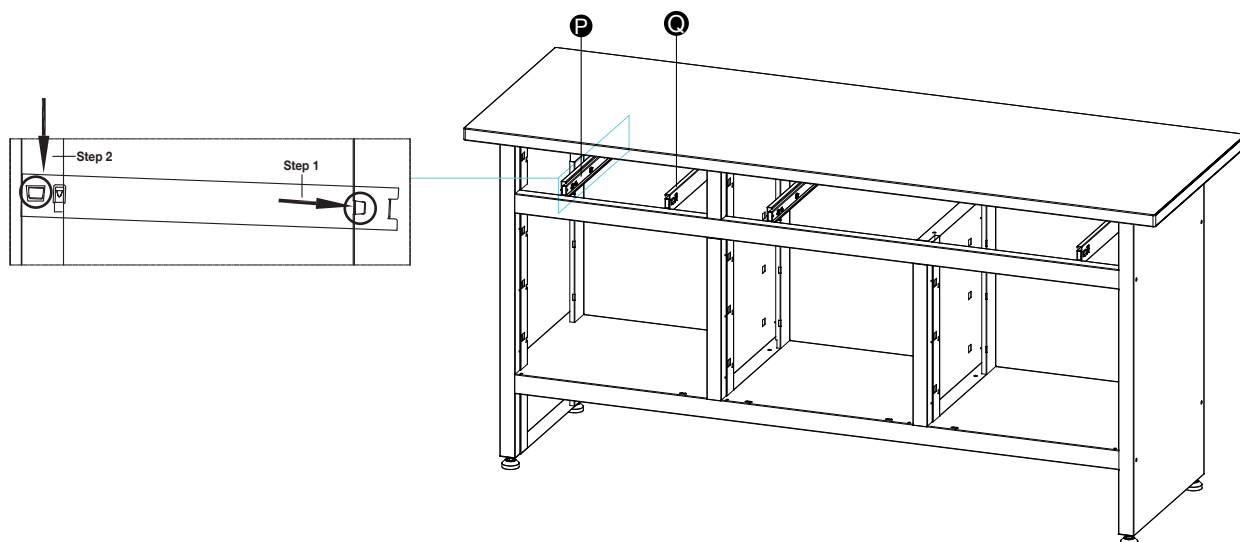


# Assembly newpo Garage Drawer Cabinet Workbench | GLWB172

**10** Attach the drawers as shown.

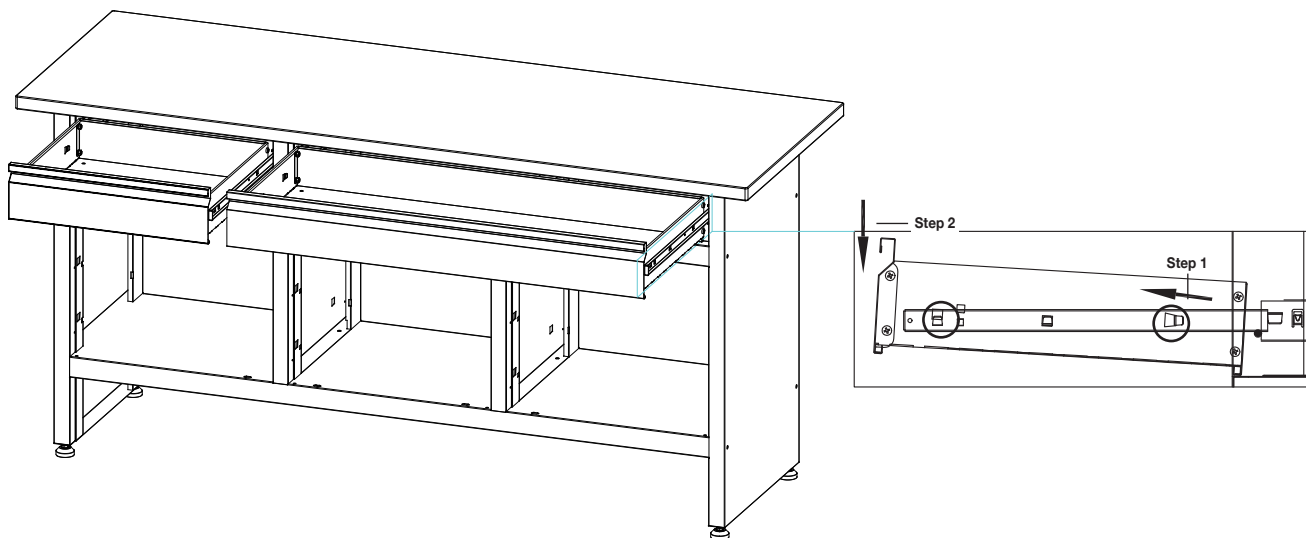

**11** Fit the cupboard door stop **R** using fixings **T**. Fit the cupboard door **I** by pushing the spring latches.

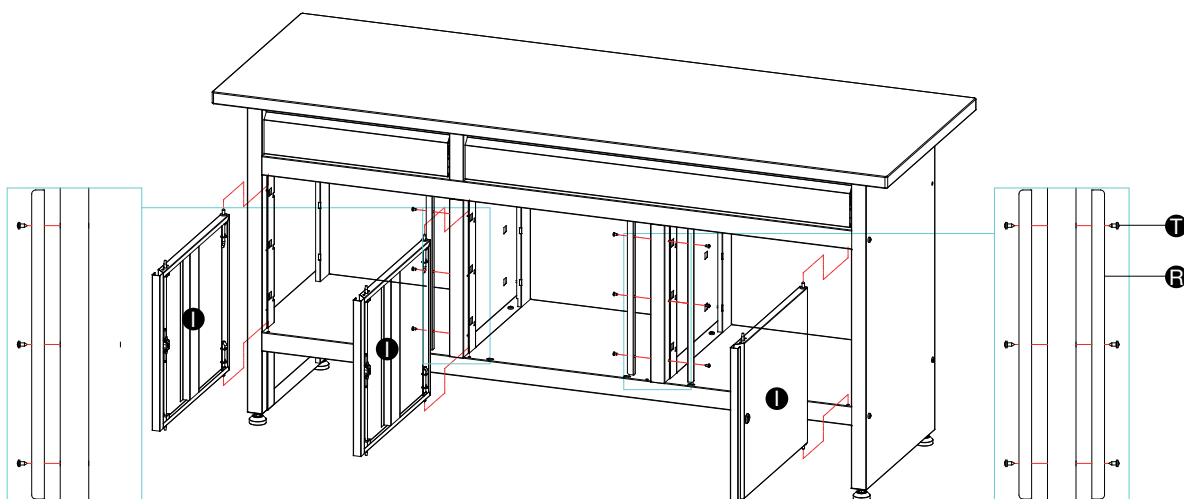

**12**

