



Installation Guidelines

Superdry Heavy Traffic

Equipment & Materials



Superdry Heavy Traffic




Preparation

For best results it is advised to install Superdry Heavy Traffic on a level and clean floor. Simply follow these simple steps to achieve a durable, clean and adaptable flooring finish in your chosen area:



Degrease

Clean the existing floor to ensure that it is grease and oil free and that the surface is clean and dry and free of dust and dirt.

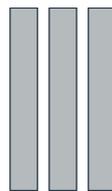

Double Sided Tape

Cut the tape into strips to fit the length of the matting. Peel off the backing from the tape and apply to the matting as detailed on the drawing below.




Clean back of mat

Clean and degrease the back of the mat and ensure it is free of dust and dirt.

Application

1

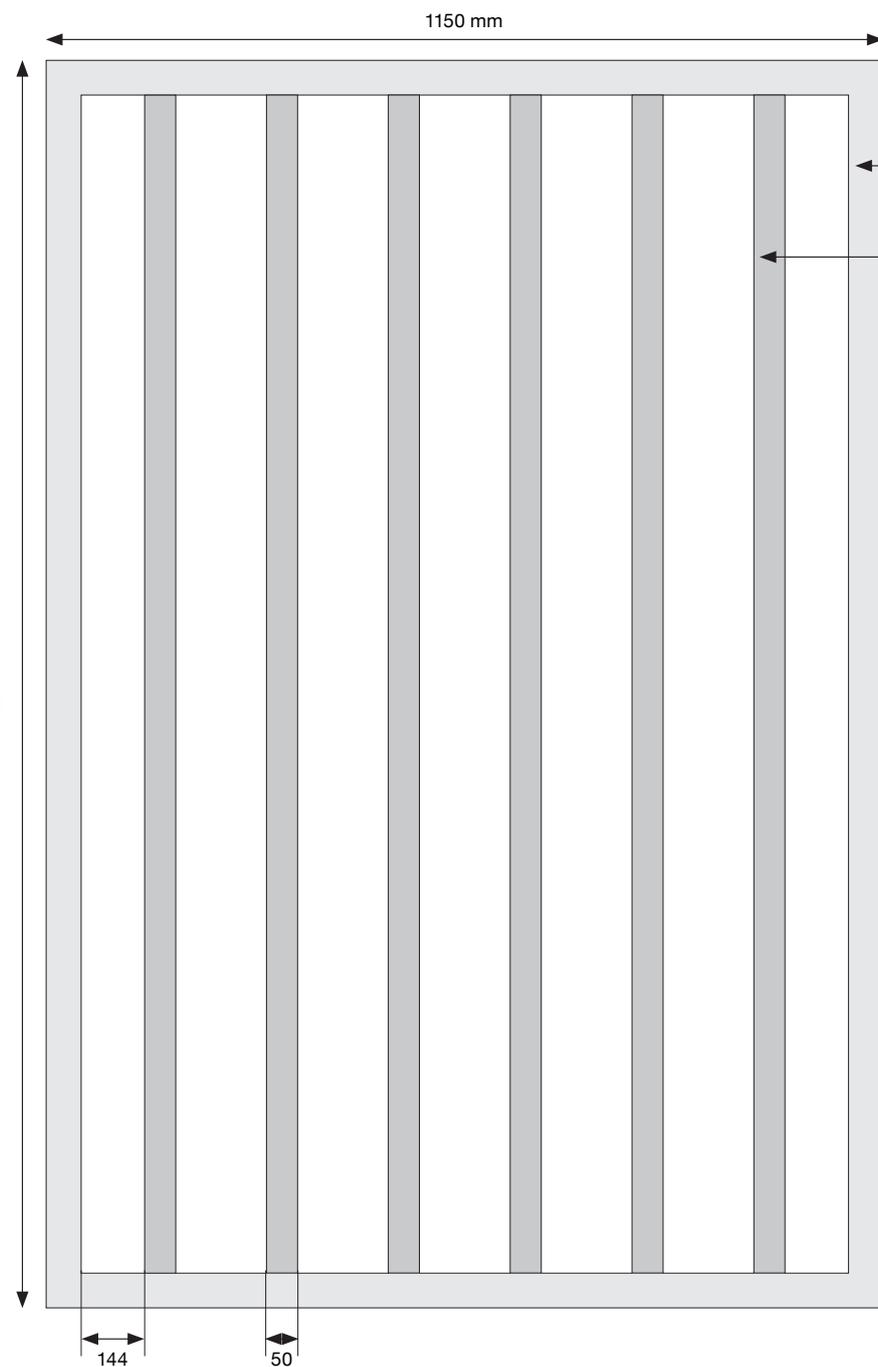


1150 mm


1800 mm

144

50

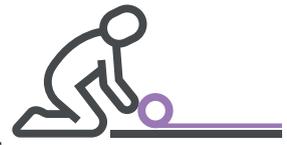

Apply tape around the edge of the mat and at least 6 strips along the 1800mm length of the mat

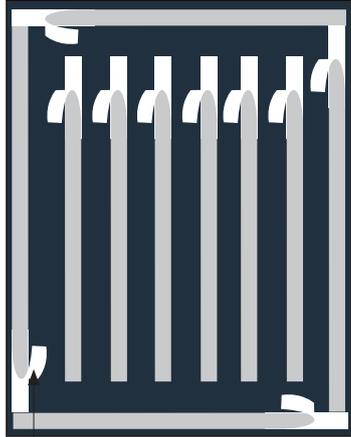

Peel off the release paper


The diagram shows a large rectangular mat with a width of 1150 mm and a length of 1800 mm. The mat is divided into seven vertical strips by six vertical lines. The distance between the first and second vertical lines is 144 mm, and the width of each strip is 50 mm. A person is shown kneeling on the right side of the mat, applying a roll of tape. An inset diagram shows the mat with the release paper being peeled off from the top and bottom edges.

2

Two person finish

Once the tape is applied to the back of the mat peel off the release paper. With two people carefully turn over the mat and apply the mat to the floor.

For areas with more than one mat repeat the process.

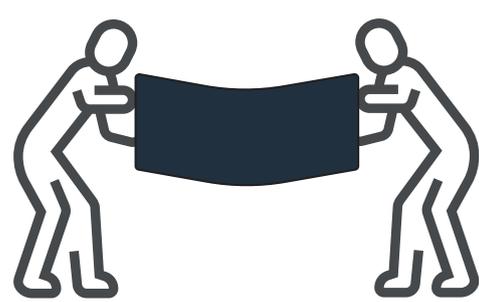

The icon shows two stylized human figures, one on the left and one on the right, both leaning forward and holding the corners of a large, dark rectangular mat. They are positioned as if they are about to flip the mat over.

Disclaimer

We recommend that you use 3M Surface Cleaner or one with a similar composition when preparing the floor for installation. Please don't use any aggressive cleaning substances which contain alcohol, acetone or similar as this may react with the rubber backing. Please don't turn the forklift wheels or make circular manoeuvres whilst moving over this mat.

If in doubt, please contact us:

Call: **+44 (0)116 240 1088** or email **sales@cobaeurope.com**