


Assembly Sheet

BiGDUG WOODWORKING STORAGE BENCH

BDWB0003

840mm H x 1380mm W x 620mm D

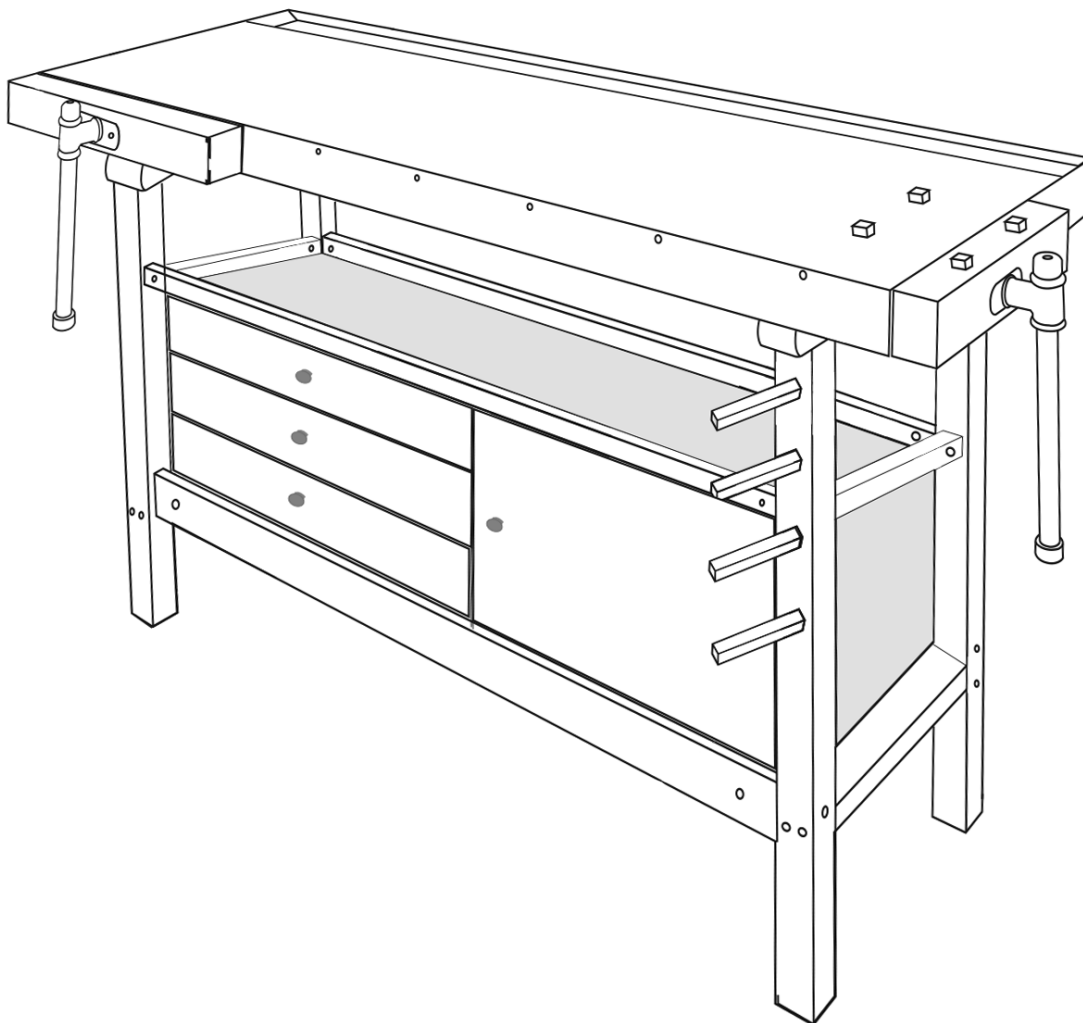

COMPONENTS CHECK LIST:



(A)

WASHER
Ø8*16*1.5
Quantity: 8



(B)

WASHER
Ø8*22*1.5
Quantity: 4



(C)

SCREW
8*90
Quantity: 8



(D)

PLATE
8*16
Quantity: 8



(E)

SCREW
8*55
Quantity: 4



(F)

ALLEN KEY
6#
Quantity: 2



(G)

SCREW
4*35
Quantity: 24






(H)


SCREW
3.5*12
Quantity: 6 (includes spares)

During assembly do not tighten bolts until all components are aligned properly, then tighten fully.

If you have any missing components please take note of the part name and contact your supplier.

Benches are safe when used responsibly. If in doubt, contact the supplier.

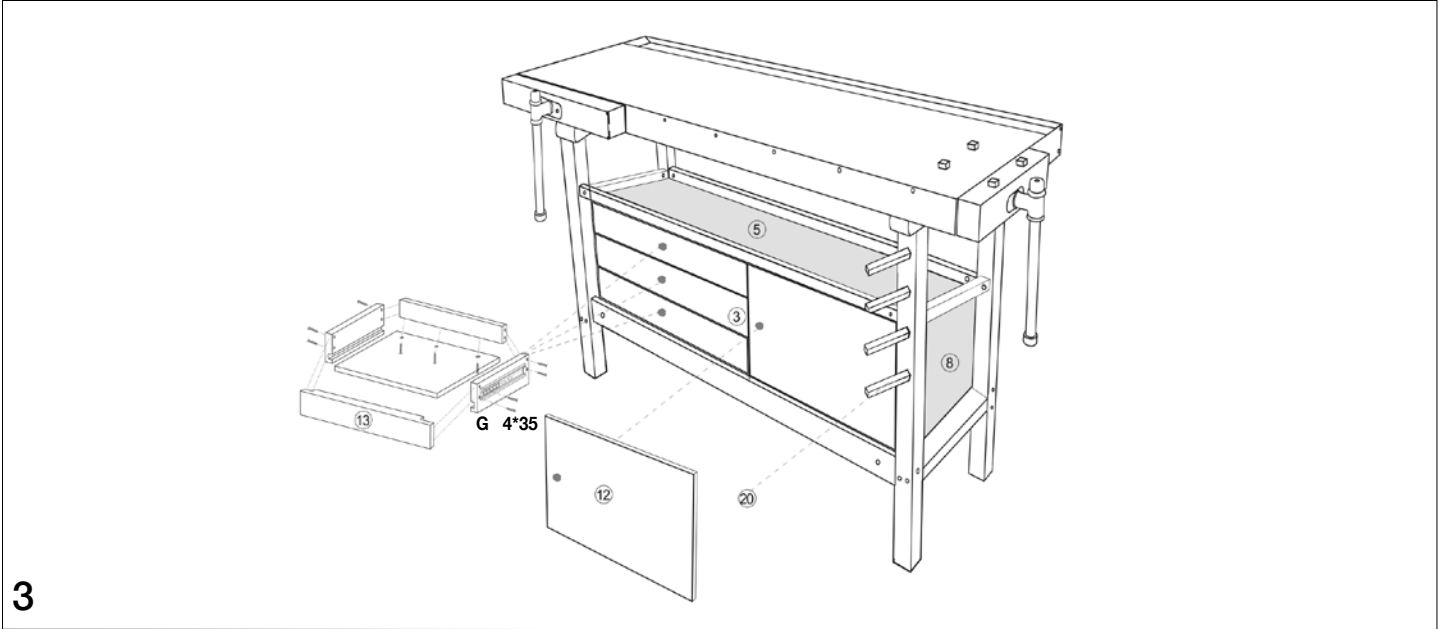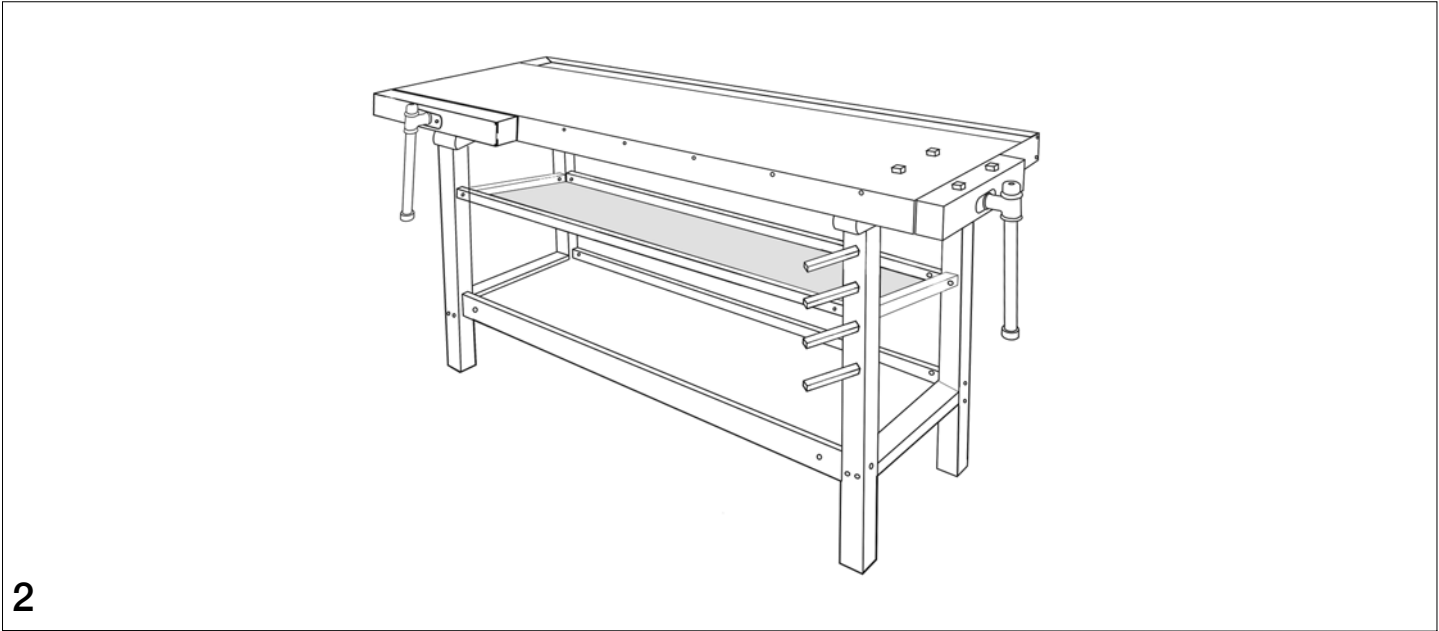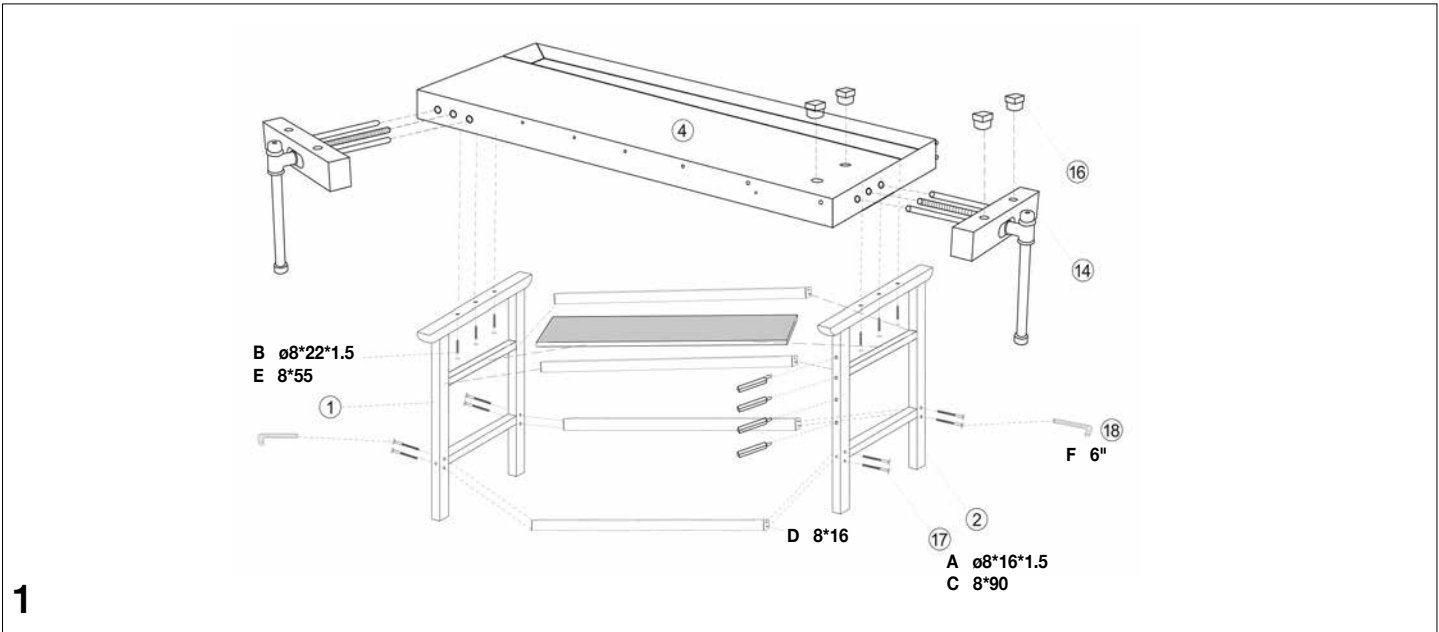

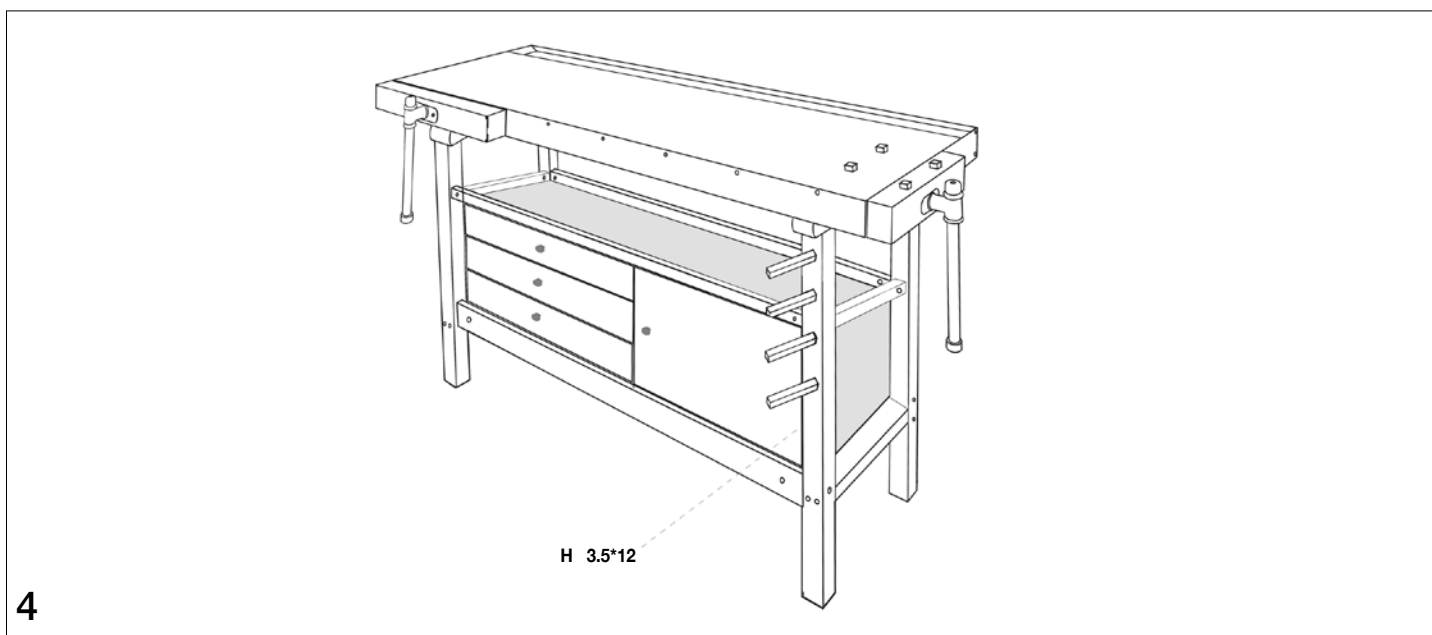

Safety Instructions



Information

If in doubt, contact the supplier:

- Read this guide before commencing assembly and retain for future reference
- Before commencing assembly, unpack carefully and check that all components ordered are included
- Assembly should be undertaken by a minimum of two competent people
- Tools – allen key (included)



Caution

During assembly, ensure to:

- Take care during assembly and in use, particularly when lifting or stretching and when using tools
- Wear appropriate safety clothing – protective gloves and footwear are recommended
- Build on a suitable level floor, which is strong enough to support the load and allow adequate working space
- Dispose of packaging materials responsibly



Warning

Rules for the safe use of workbenches:

- Ensure these instructions are retained for reference and that users are aware of the rules for safe use
- Never climb on the structure or stand on the workbench
- Do not lean or support ladders, steps, or other objects against the workbench
- Do not use in damp or wet conditions
- Ensure that the maximum load carrying capacities are not exceeded