

ROTHLEY

PO No. 33650

Instruction Guide

Home office kit



Accessorising your home

www.rottley.com

IMPORTANT INFORMATION

Before Installing please identify that you have all the kit parts as listed on page 2.

Proper fitting of this item is **extremely important**.

If the necessary tools and expertise are not available, we would recommend installation by a **qualified tradesperson**.

Ensure your wall is in sound condition prior to fitting.


The screws & wall plugs provided are for plasterboard partitions or masonry walls.

Ensure that no hidden pipes or cables will interfere when installing.


Ensure that **eye protection** is worn throughout the installation.

Kit Parts

Included

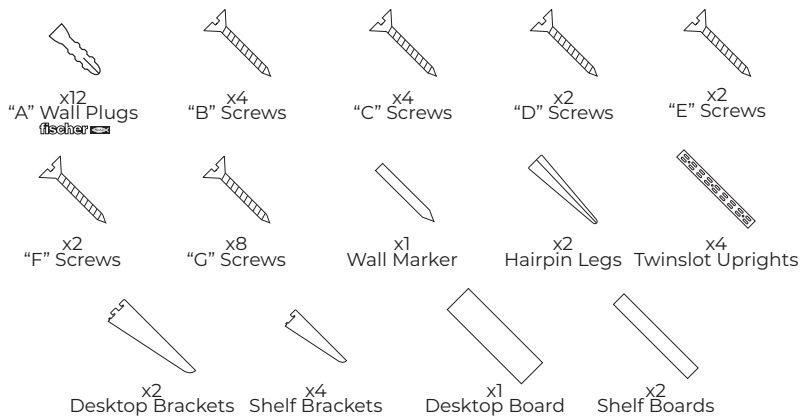

Required Extras

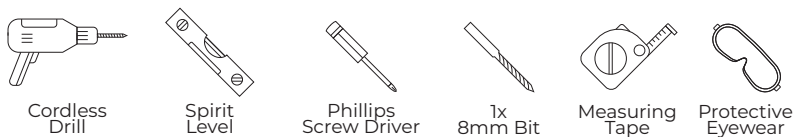


Step 1

Draw 2 - Unobstrusive horizontal pencil lines on the wall positiond **655mm** from floor as shown.


Step 2

Draw 2 - Unobstrusive vertical pencil lines on the wall positioned **600mm** apart as shown.

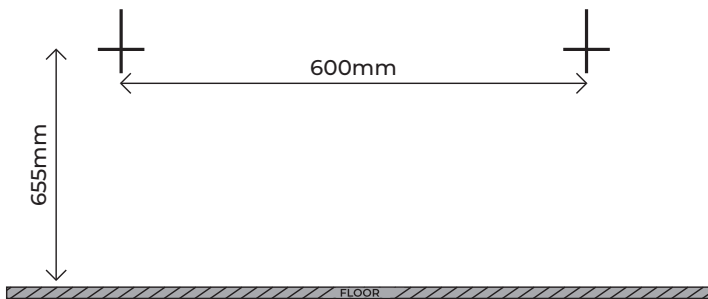

Step 3



Use a spirit level to ensure the upright is vertical.

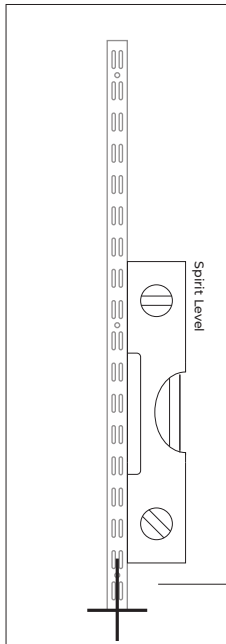

Align the end of the upright against the horizontal and vertical pencil line as shown.



Step 4

Use the Wall Marker (supplied) to mark all three holes.



Step 5

Drill **Ø8MM** X minimum **50MM deep** X 3 holes
in wall and insert **fischer** wall plugs provided in **Pack A**.

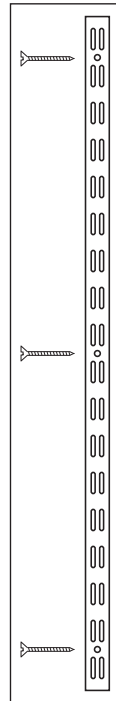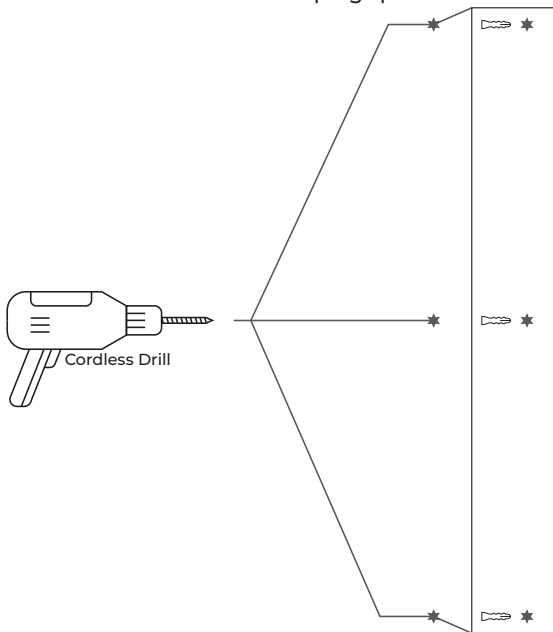


Step 6

Using screw **pack 'A'** **Ø5MM** X **60MM** long
screws provided, screw upright to the wall.

Step 7

Repeat Steps **3/4/5 & 6** to fix the second upright.

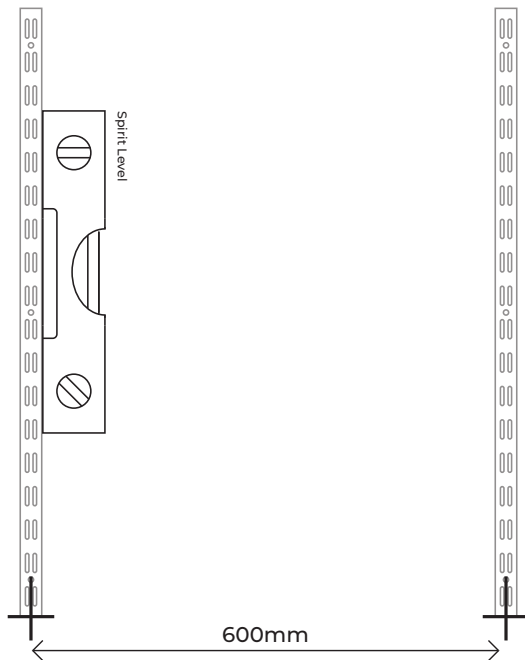

Step 8


Butt the end of the third upright against the previously fixed upright as shown.
(Use a spirit level to ensure alignment of both uprights and they are positioned vertically)

Step 9

Repeat out steps **4/5 & 6** to fix your third upright to the wall.


Step 10

Repeat steps **8 & 9** to fix your fourth upright to the wall.

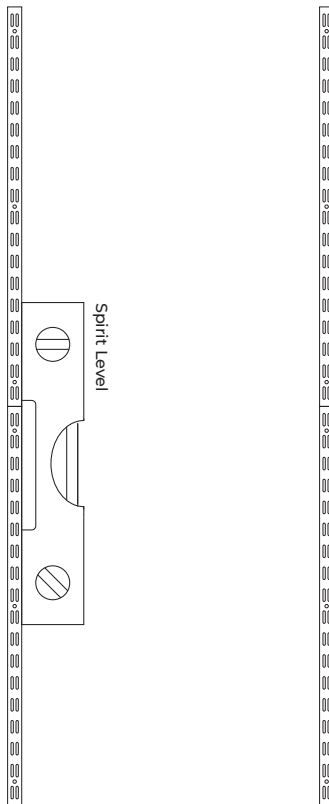

Step 11



Slot the shelf brackets into the uprights to your chosen height.

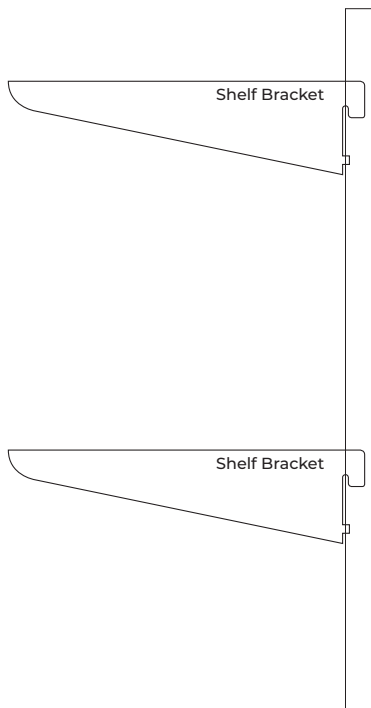

Step 12



Rest shelves onto brackets
and using screws provided
screw shelves to the brackets.

**** SEE SCREW DIAGRAM BELOW
FOR CORRECT SCREW SELECTION****

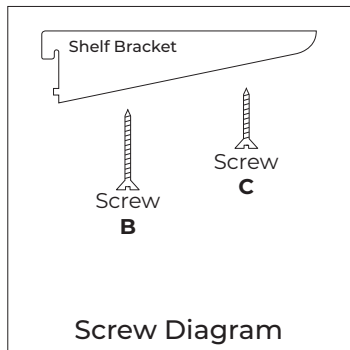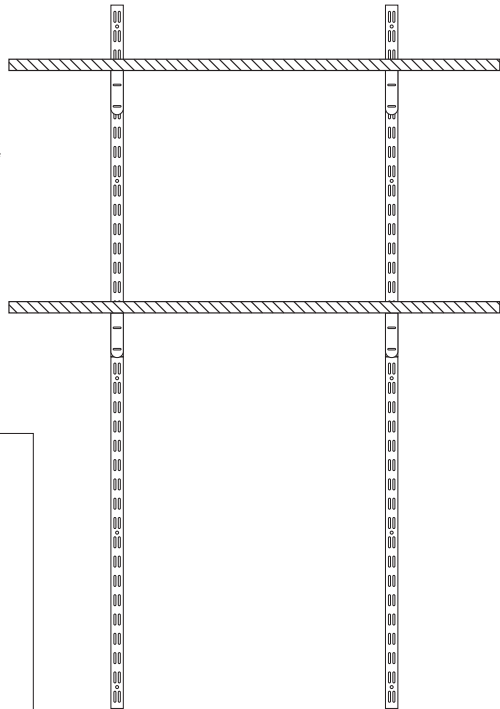

Step 13

Slot the desktop brackets into the uprights as shown.

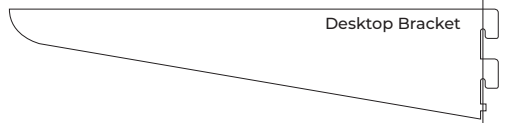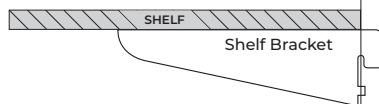


Step 14

Screw the table legs to the desktop using M5 X 15MM Long screws **pack G**.



Note:



Place Hairpin legs over the threaded inserts and use screw **pack G** to attach.

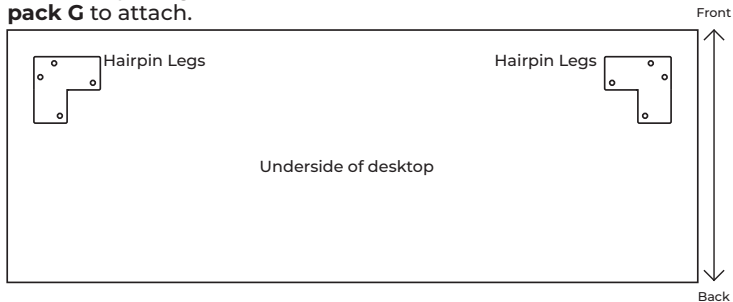

Step 15

Rest desktop on top of the brackets and using screws provided screw desktop to the brackets.

**** SEE SCREW DIAGRAM BELOW
FOR CORRECT SCREW SELECTION****

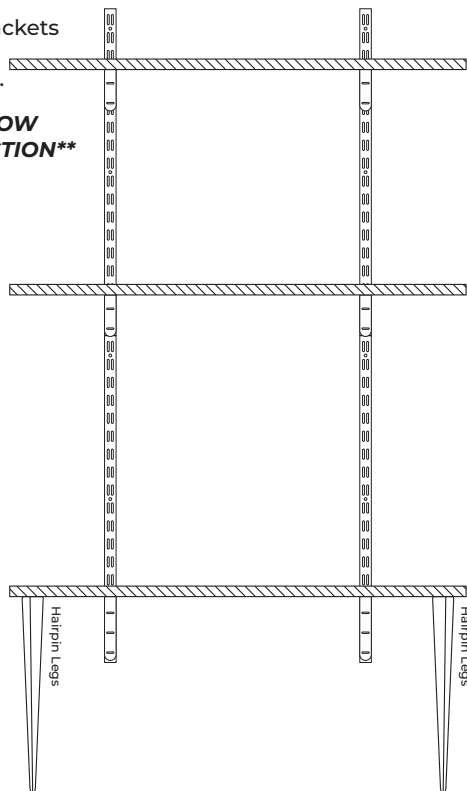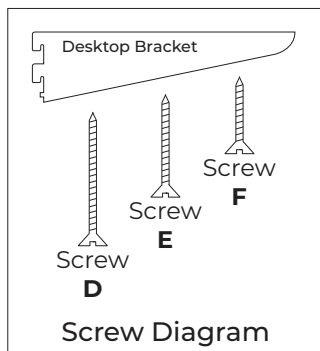

ROTHLEY

@RothleyLtd

