




INSTRUCTIONS FOR:  
**TROLLEY JACK**  
**MODEL: 1050CX**

Your new Jack is produced and manufactured to a high standard of dependability and will, if used according to these instructions and properly maintained, give you years of trouble free performance.

**⚠ IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

## 1. SAFETY PRECAUTIONS

- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts.  
*Use genuine parts only. The use of improper parts may be dangerous and will invalidate the warranty.*
- ✓ Locate the jack in a suitable, well lit working area.
- ✓ Keep working area clean and tidy and free from unrelated materials.
- ✓ Use jack on level and solid ground, preferably concrete. *Avoid tarmac as jack may sink in.*
- ✓ Place wedges under wheels of vehicle (*but ensure wheels of jack can freely move*).
- ✓ Ensure the vehicle handbrake is engaged, engine is switched off and transmission is in gear (or "PARK" if automatic).
- ✓ Ensure minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Only place jack under those lifting points recommended by vehicle manufacturer (*see vehicle hand book*).
- ✓ Check the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ❑ **DANGER:** *Use the jack for lifting only, NOT for supporting the lifted load.*
- ✓ Use suitable capacity axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use a qualified person to maintain or repair the jack hydraulic system.
- ✗ DO NOT operate the jack if damaged.
- ✗ DO NOT allow untrained persons to operate the jack.
- ✗ DO NOT exceed the rated capacity of the jack.
- ✗ DO NOT allow the vehicle to move while supported by the jack, or use the jack to move the vehicle.
- ✗ DO NOT jack vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substances.
- ✗ DO NOT work under the vehicle until axle stands have been correctly positioned.
- ✗ DO NOT use the jack for purposes other than which it is intended.
- ✗ DO NOT top up hydraulic system with brake fluid. Use hydraulic jack oil only.
- ✗ DO NOT adjust the safety overload valve.
- ✓ When not in use store jack, fully lowered, in a safe, dry, childproof area.

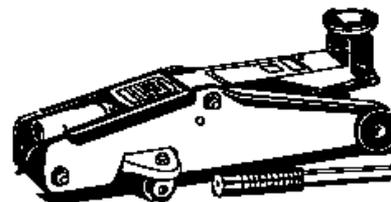


## 2. ASSEMBLY & SPECIFICATIONS

- 2.1. Place the handle (fig 1 item H) into the jacking point (A) for use.
- 2.2. Remove handle and place over release valve nut (B) to open and close the valve.

Specifications	
Capacity	2000kg
Min. saddle height	130mm
Max. saddle height	350mm
Hydraulic lift	220mm
Length/Width/Height	492x218x132 mm
Weight	10.5kg


## 3. OPERATING INSTRUCTIONS

- 3.1. **Before first use.**
  - 3.1.1. Before using jack, purge hydraulic unit in order to eliminate any air in the system. Place handle (fig 1.H) onto the release valve nut (B) and open valve by turning the handle anti-clockwise, place handle back into the jacking point (A) and pump for 30 to 40 seconds. When complete, close the release valve by turning the valve nut (B) clockwise.
  - 3.1.2. Place a few drops of hydraulic jack oil on pump piston and pump handle several times to distribute oil. Thoroughly lubricate moving parts.
- 3.2. **General jacking.**
  - ❑ **WARNING! Before lifting ensure Section 1 safety instructions are read and understood.**
  - 3.2.1. Prepare the vehicle as mentioned in the safety instructions ensuring the ground on which the jack is to stand is level and solid (not tarmac).
  - 3.2.2. Position the jack saddle under the vehicle manufacturer's recommended lifting point.
- 3.3. **Jacking the vehicle.**
  - 3.3.1. Turn the handle clockwise to close the release valve (B) place handle in point (A) and commence pumping handle up and down using maximum strokes until the jack saddle reaches the vehicle jacking point. Check the jacking point is centrally located on the saddle and raise the vehicle.
  - 3.3.2. Should the jack become overloaded, a safety excess pressure valve will open, and stop the vehicle from lifting.
    - ❑ **WARNING!** The jack is a lifting device only and must not be used to support the load. Use correctly rated axle stands to support the load.
- 3.4. **Lowering the vehicle**
  - 3.4.1. If using axle stands, raise the jack high enough for the stands to be easily removed. Then place handle on release valve nut (B) and turn anti-clockwise, very slowly, to open the valve.
  - 3.4.2. The lowering speed is controlled by the amount you turn the handle. Lower carefully, avoid any sudden changes in descent rate which would shock load the hydraulic system.
    - ❑ **WARNING!** *Ensure there are no persons or obstacles beneath the vehicle, or in the path of its descent.*

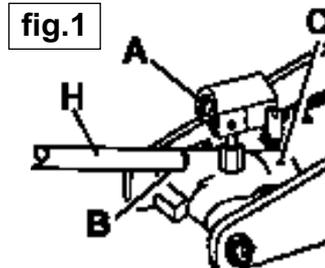

## 4. MAINTENANCE

- 4.1. When the jack is not in use, the ram should be in its lowest position to minimise corrosion. Remove the handle to inactivate jack.
- 4.2. Keep the jack clean and lubricate all moving parts with acid free oil on a regular basis.
- 4.3. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found remove jack from service and take necessary action to remedy the problem. DO NOT use the jack if believed to have been subjected to abnormal load or shock load.
- 4.4. Periodically check the pump piston and the ram for signs of corrosion. Clean exposed areas with a clean oiled cloth.
- 4.5. After one year the oil should be replaced in order to extend the life of the jack. Use hydraulic jack oil only.
- ✓ **IMPORTANT:** Only fully qualified personnel should attempt hydraulic maintenance or repair.
- 4.6. To check the oil level, fully lower the jack. Remove filler screw (fig.2. O). The correct level is the bottom of the screw hole. If oil level is low, fill as required.

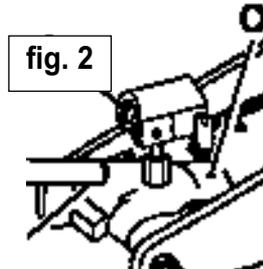

**NOTE:** Use a good quality jack oil, such as SEALEY HYDRAULIC JACK OIL.

- ❑ **WARNING:** DO NOT use brake fluid, or any fluid other than hydraulic jack oil as this may cause serious damage to the jack and will invalidate the warranty!

- 4.7. To drain the oil, remove the filler plug and raise front of jack. Make sure that no dirt is allowed to enter the hydraulic system.

✓ **IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.

**DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and 'phone number of your local agent. If jack is under guarantee contact your local Sealey dealer.

### De-commissioning the Jack

Should the jack become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

## 5. TROUBLE SHOOTING

**IMPORTANT: MAINTENANCE OR REPAIR OF HYDRAULIC SYSTEM MUST ONLY BE PERFORMED BY A QUALIFIED PERSON.**

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load	<ol style="list-style-type: none"> <li>1) Overloaded</li> <li>2) Oil level low</li> <li>3) Release valve not correctly closed</li> <li>4) Air in system</li> <li>5) Piston rod not functioning</li> <li>6) Packing worn or defective</li> </ol>	<ol style="list-style-type: none"> <li>1) Be sure to use jack with adequate capacity</li> <li>2) Top up oil level</li> <li>3) Check and close release valve</li> <li>4) Open release valve and pump the handle a few times. Close valve and re-try</li> <li>5) Clean and replace oil</li> <li>6) Replace packing</li> </ol>
Jack does not lift high enough or feels "spongy"	<ol style="list-style-type: none"> <li>1) Oil level too high or too low</li> <li>2) Worn seals</li> <li>3) Air in system</li> <li>4) Release valve not closed</li> </ol>	<ol style="list-style-type: none"> <li>1) Fill or remove excess oil</li> <li>2) Return jack to local service agent</li> <li>3) Open release valve and pump the handle a few times. Close valve and re-try</li> <li>4) Check and close release valve</li> </ol>
Jack lifts poorly	<ol style="list-style-type: none"> <li>1) Pump packing or valves malfunctioning</li> <li>2) Oil is dirty</li> <li>3) Air in the system</li> </ol>	<ol style="list-style-type: none"> <li>1) Replace packing and/or clean valves</li> <li>2) Replace oil</li> <li>3) Open release valve and pump the handle a few times. Close valve and re-try</li> </ol>
Jack lifts but will not hold load	<ol style="list-style-type: none"> <li>1) Release valve partially open</li> <li>2) Dirt on valve seats</li> <li>3) Air in system</li> <li>4) Faulty seals</li> <li>5) Packing worn or defective</li> </ol>	<ol style="list-style-type: none"> <li>1) Check and close release valve</li> <li>2) Lower jack, close release valve. Place foot on front wheel and pull up lifting arm to it's full height by hand. Open the release valve to lower arm</li> <li>3) Open release valve and pump the handle a few times. Close valve and re-try</li> <li>4) Replace packing or contact local service agent</li> <li>5) Replace packing</li> </ol>
Jack will not lower completely	<ol style="list-style-type: none"> <li>1) Unit requires lubrication</li> <li>2) Piston rod bent or damaged</li> <li>3) Jack frame/link system distorted due to overloading/poor positioning</li> <li>4) Air in system</li> <li>5) Release valve partially closed</li> <li>6) Jack spring damaged or unhooked.</li> </ol>	<ol style="list-style-type: none"> <li>1) Oil all external moving parts</li> <li>2) Replace rod or contact local service agent</li> <li>3) Replace damaged parts or contact local service agent</li> <li>4) Open release valve and pump the handle a few times. Close valve and re-try</li> <li>5) Check and fully open release valve</li> <li>6) Replace spring or contact local service agent</li> </ol>
Jack does not lower at all	<ol style="list-style-type: none"> <li>1) Release valve closed</li> </ol>	<ol style="list-style-type: none"> <li>1) Check and fully open release valve</li> </ol>

**Declaration of Conformity** We, the sole importer into the UK, declare that the product listed below is in conformity with the following EEC standards and directives

**TROLLEY JACK**  
Model: 1050CX

93/68/EEC CE Marking Directive  
98/37/EC Machinery Directive (S.I.1992/3073 & Amendments)



The construction file for this product is held by the Manufacturer and may be inspected by A national authority upon contact Jack Sealey Ltd.

Signed by Mark Sweetman

29th June 2000

For Jack Sealey Ltd. Sole importer into the UK of Sealey Quality Machinery.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** Call 01284 757525 for our catalogue & promotions. Leave your full name, address & postcode.



Sole U.K. Distributor  
Sealey Group,  
Bury St. Edmunds, Suffolk.



01284 757500



01284 703534

E-mail: sales@sealey.co.uk